 
 


	System	Flag Color
-3-Circuit, Shared Neutral and System Ground	(SHN)	Black
-4-Circuit, 3 with Shared Neutral and System Ground and 1- Isolated Circuit and Ground	(3+D)	Black

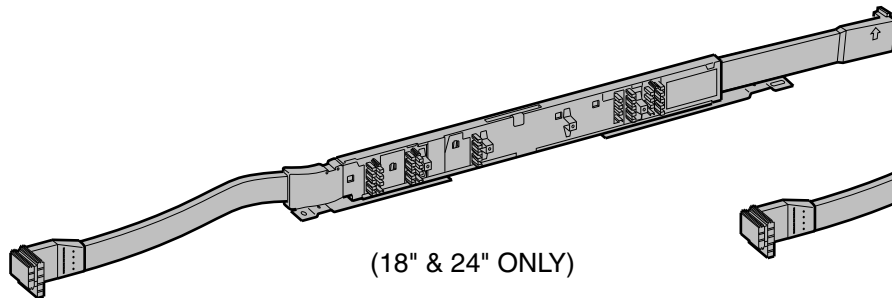


(18" & 24" ONLY)

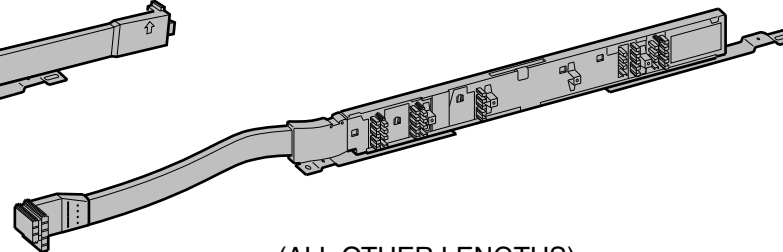


(ALL OTHER LENGTHS)

Optional Wiring Schematics:	System	Flag Color
-2-General Circuits with Shared Neutral & System Ground and 2-Isolated circuits with Shared Neutral and Isolated Ground	(2+2)	Grey
-3-Separate Circuits - 2 with own Neutral and Isolated Ground, 1 with own Neutral and System Ground	(SPN)	White
-4-Circuit - 3 with Shared Neutral and Isolated Ground, 1-Circuit with System Ground	(3I+1)	Tan

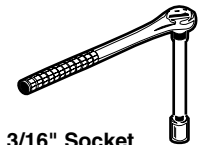 

3/16" Socket




 


WARNING:
ALL ELECTRICAL INSTALLATIONS SHOULD BE
PERFORMED BY A QUALIFIED PERSON IN ACCORDANCE
WITH CODES AND REGULATIONS APPLICABLE AT THE
INSTALLATION SITE. CIRCUITS SHOULD BE CHECKED
FOR PROPER VOLTAGES



If you have a problem, question, or request,
call your local dealer or AMQ Customer Care
(877.801.0370) for immediate action by
people who want to help you.

    Wiring Schematic

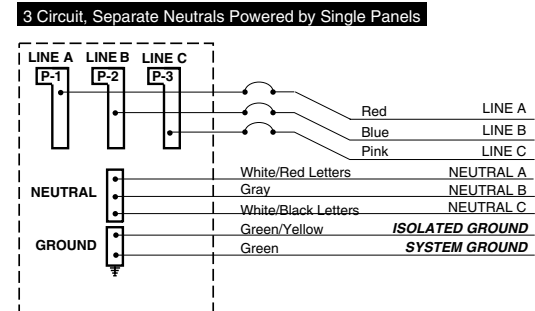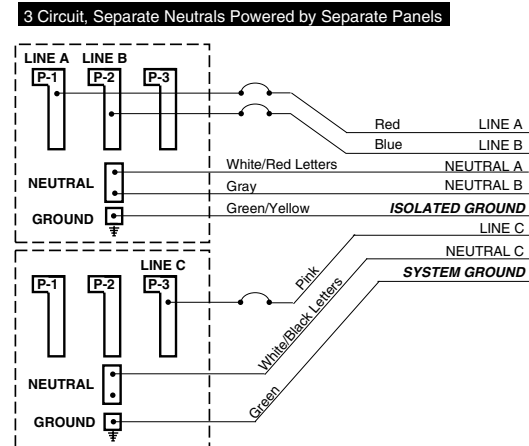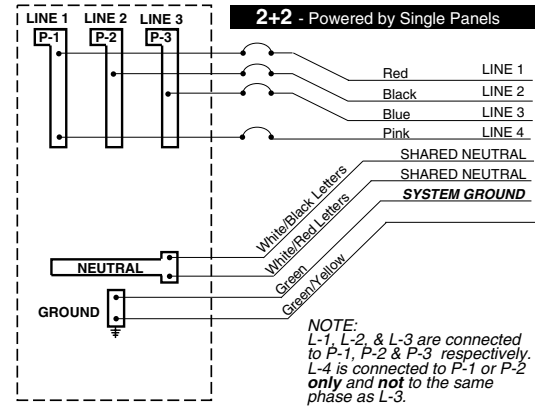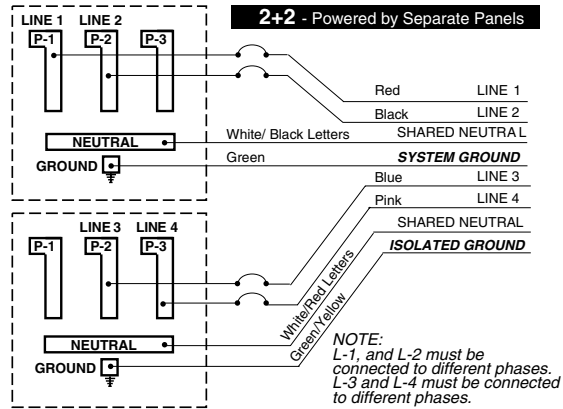

WARNING:

Risk of Fire or Electric Shock: This office furnishing system may be connected to more than one source of supply. All sources must be disconnected prior to any servicing. No single circuit may be powered by more than one source.





ELECTRICAL DATA:

125 V 60 HZ 20 Amp USA/CANADA

208Y/120 VAC 3-Phase Service
250/125 VAC 1-Phase Service

Wiring schematics must be followed to prevent overloading of the neutrals.

    Wiring Schematic

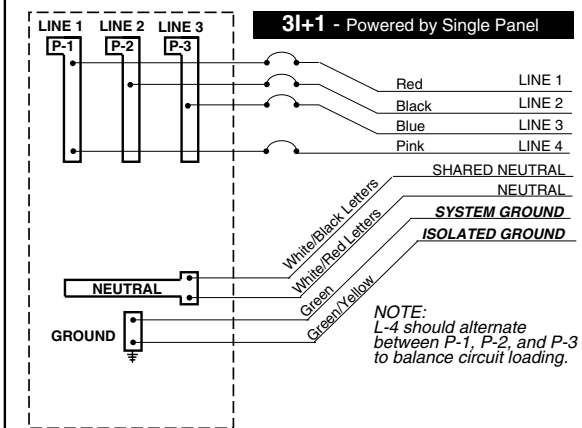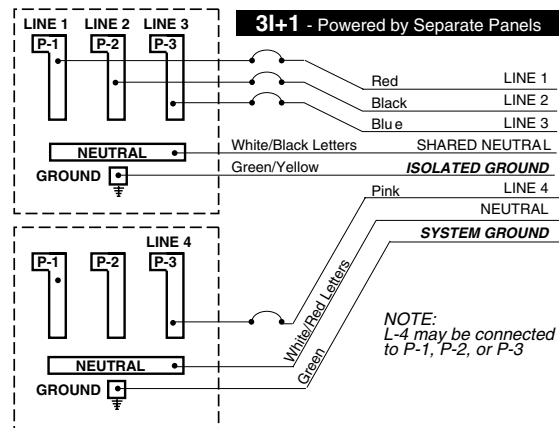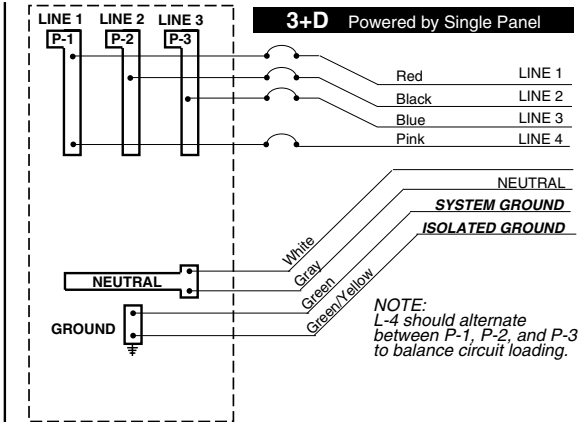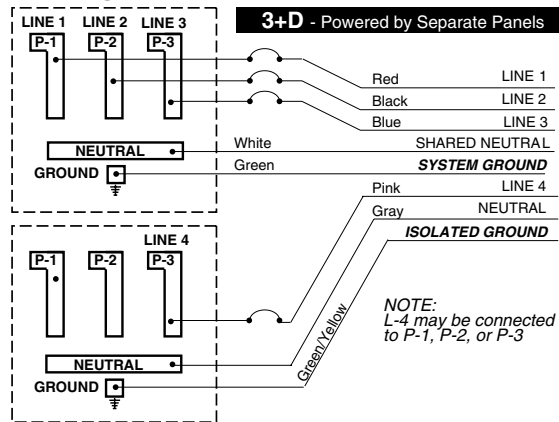

ELECTRICAL DATA:

125 V 60 HZ 20 Amp USA/CANADA


208Y/120 VAC 3-Phase Service
250/125 VAC 1-Phase Service

Wiring schematics must be followed to prevent overloading of the neutrals.


WARNING:

Risk of Fire or Electric Shock: This office furnishing system may be connected to more than one source of supply. All sources must be disconnected prior to any servicing. No single circuit may be powered by more than one source.

 3 Circuit, Shared Neutral

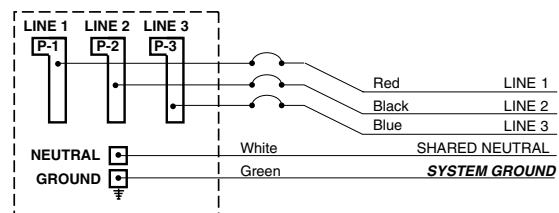

 
3 Circuit, Shared Neutral Powered by Split Phase Panel

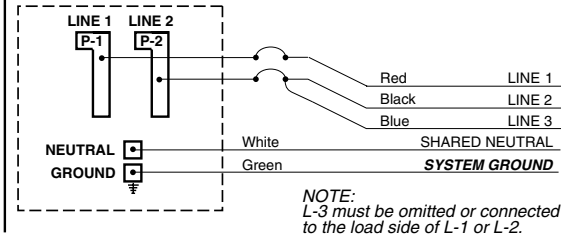



Factory Installed Avenir Powerway

1. When installing panels with factory installed powerways, it is important to locate the yellow tape on the base trim. The yellow tape must always be on your right side as you face the panel. This will insure proper powerway to powerway connections after assembling your panels.


 
2. To install a powerway into a panel remove the base trim and attach with (2) nuts (provided).

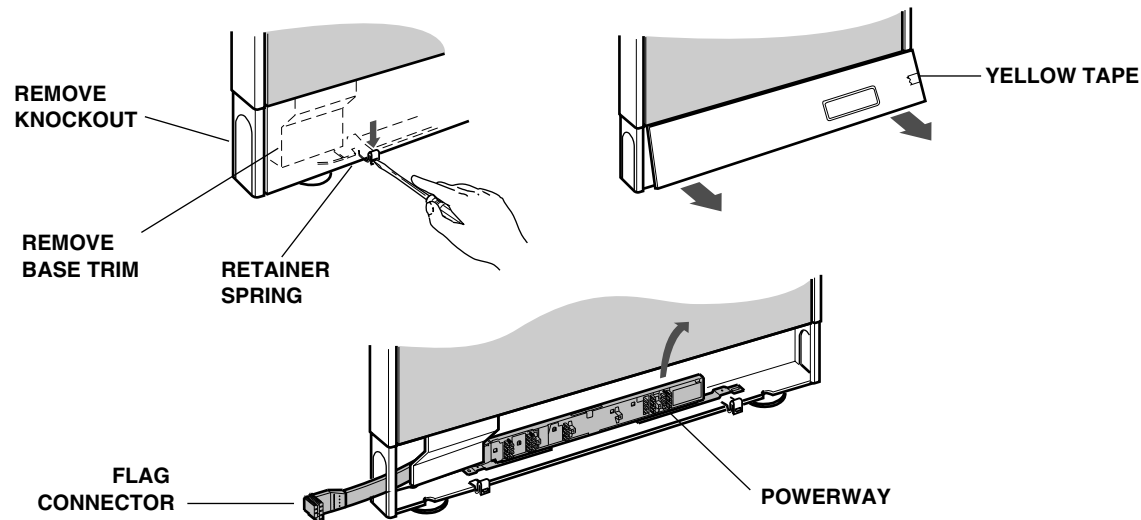

Field Installed Avenir Powerway

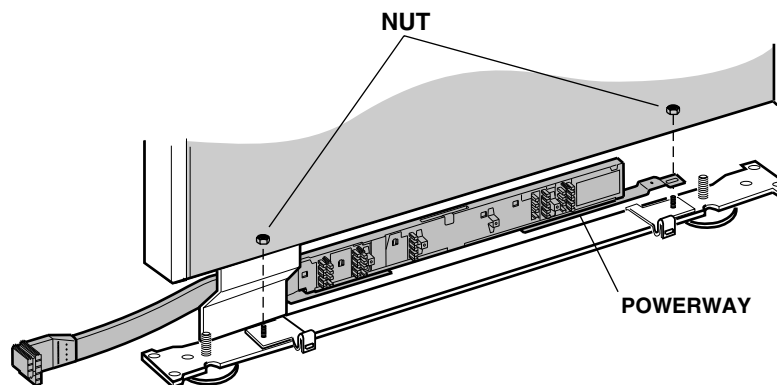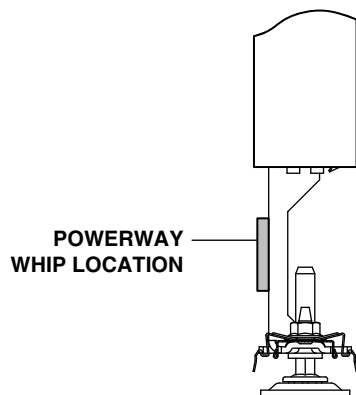  

  
NOTE:
60" powerway only.
Factory & field installation.
Mount powerway using 'A'
portion of slot.

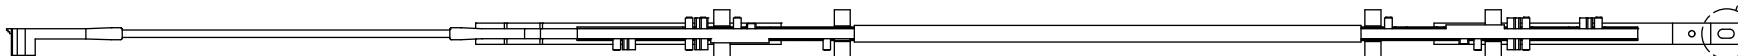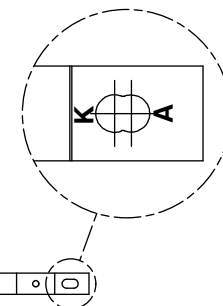



Factory Installed kick Powerway

1. When installing panels with factory installed powerways, it is important to locate the yellow tape on the base trim. The yellow tape must always be on your right side as you face the panel. This will insure proper powerway to powerway connections after assembling your panels.


 
2. To install a powerway into a panel remove the base trim and attach with (2) nuts (provided).

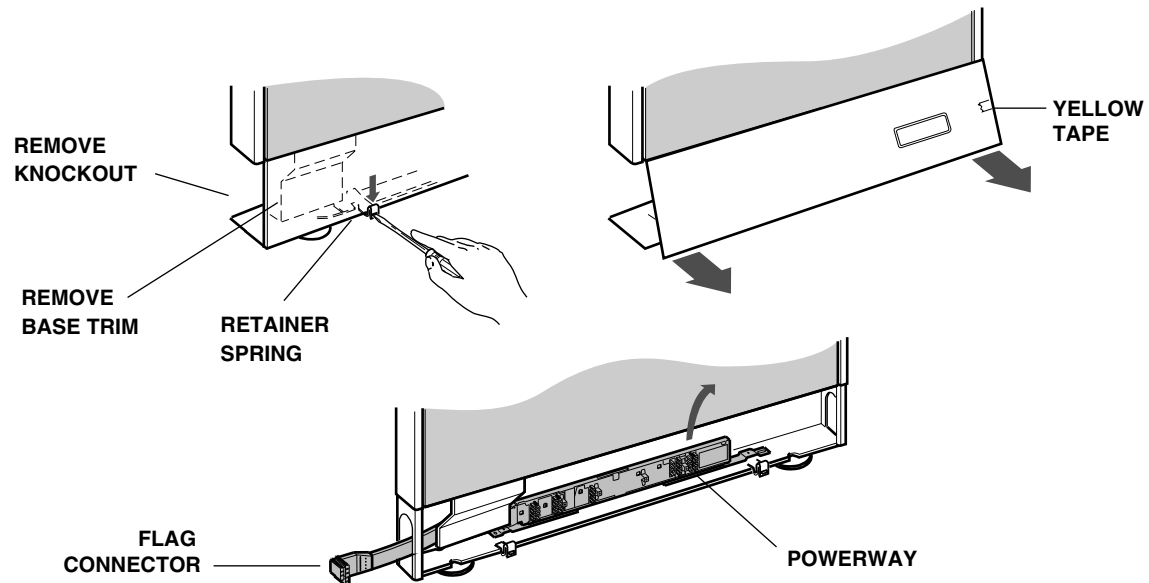

Field Installed kick Powerway

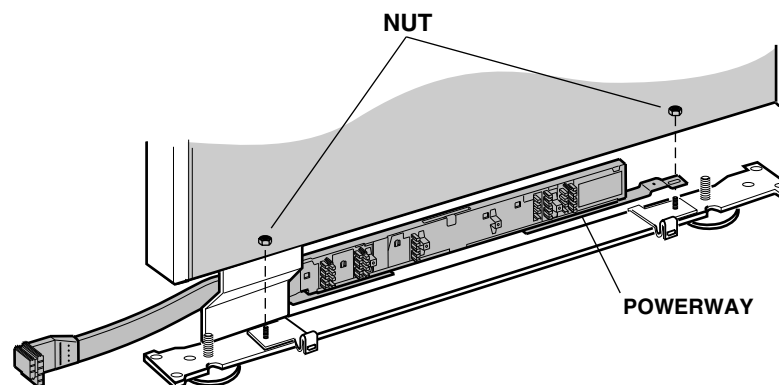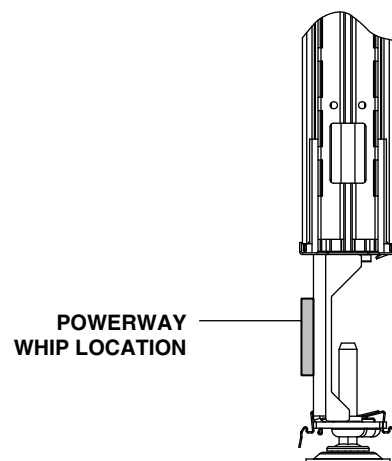  

  NOTE:
60" powerway only.
Factory & field installation.
Mount powerway using 'K'
portion of slot.

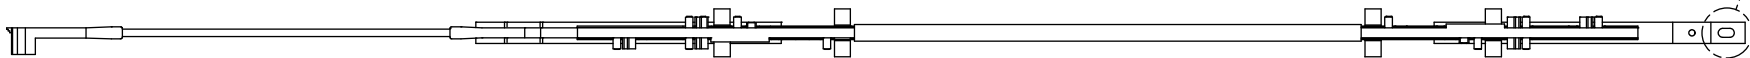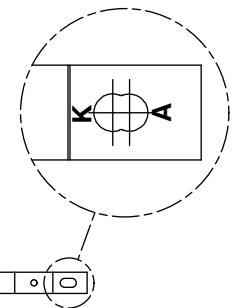


Powerway to Powerway Connections


1. Before starting this step, refer to Steelcase Installation Directions 939500720 for Avenir basic panel assembly and 939504744 for kick basic panel assembly.

NOTE: To make powerway to powerway connection, push flag end into the pre-determined J-connector.

 
The electrical power (Base Power-in or Power Pole) location must be known prior to installing the powerway.

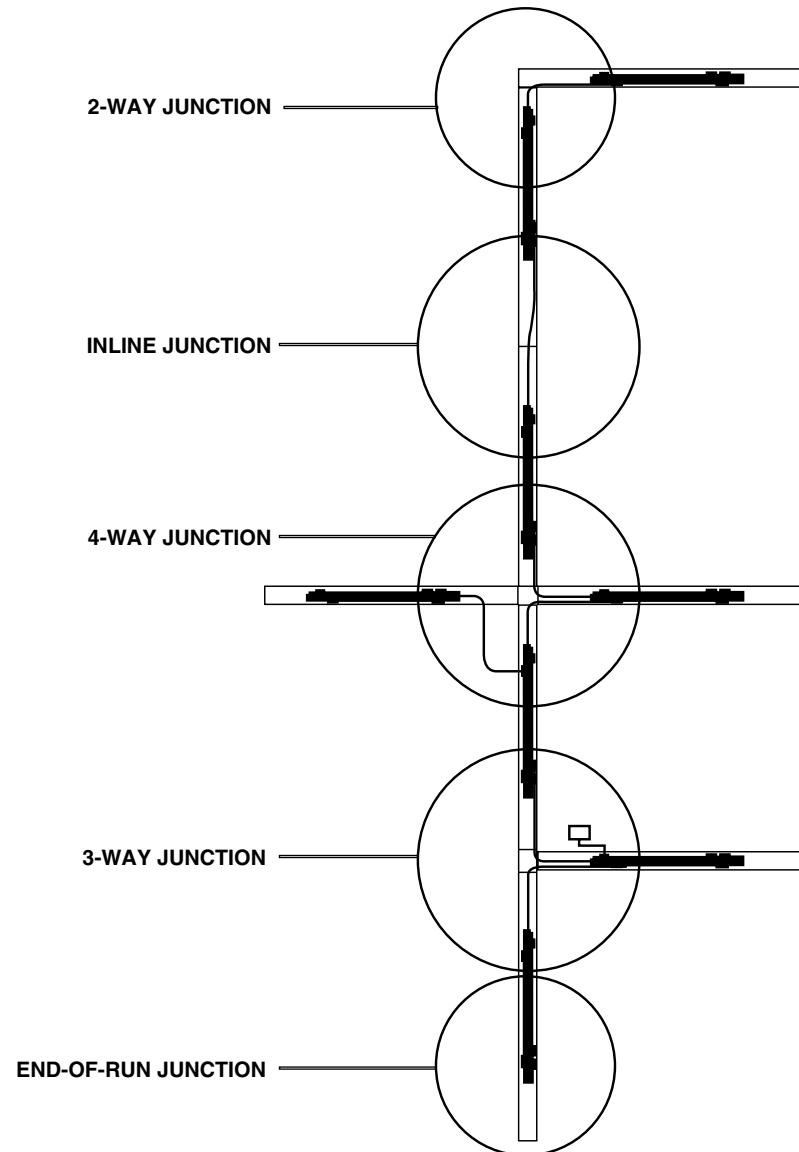


In-line Junction

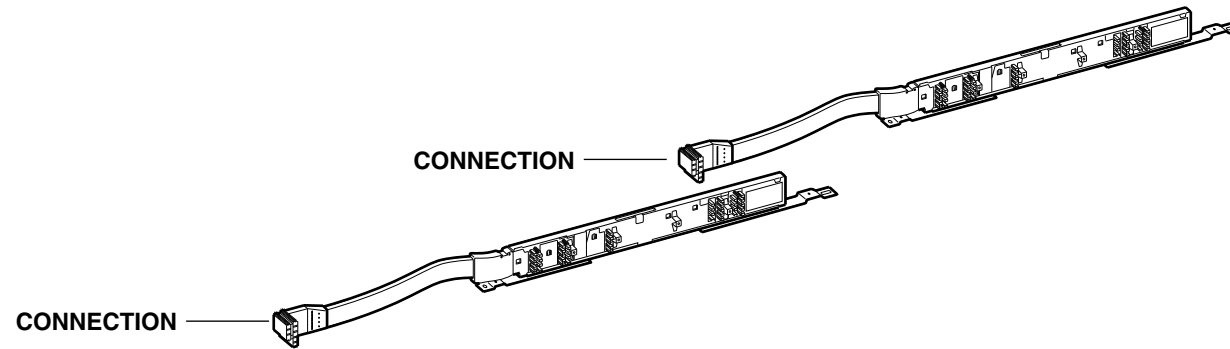 

4-way Junction

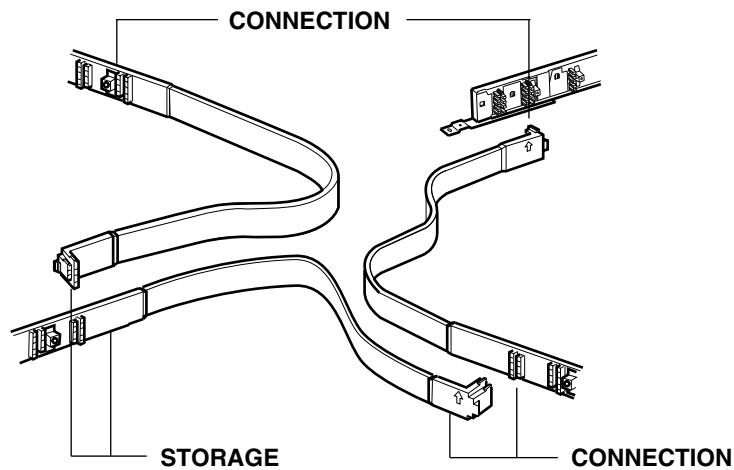 

3-way Junction

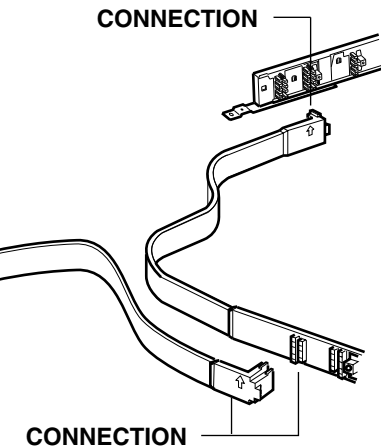 

End of Run

