

Bodi


Assembly Guide




Components

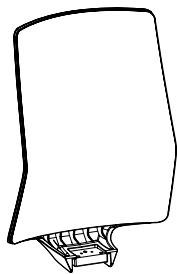


Backrest

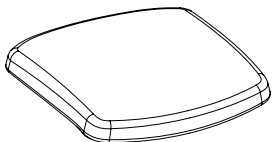


Seat

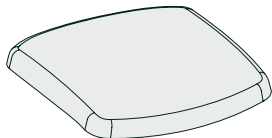


Seat Cover

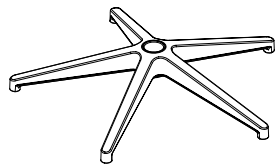


Base

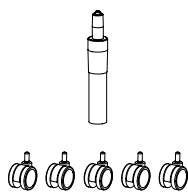


Gas Spindle/
Castor

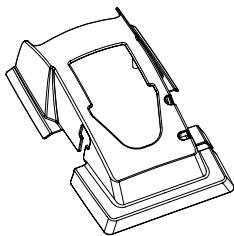


Mechanism Cover

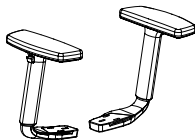

Armrest

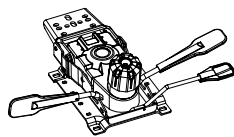

Mechanism



Mechanism Bar



M8X35
x3



M6X42
x2



M6X37
x6



M6X32
x2


Bolt Kit



Installation


Step 1

Insert seat shell into cover and zip closed.

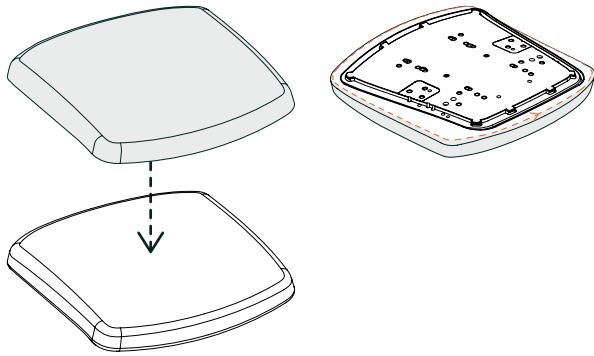


Step 2

Attach the armrest to the seat shell using six M6X37 bolts and tighten the six M6X37 screws.

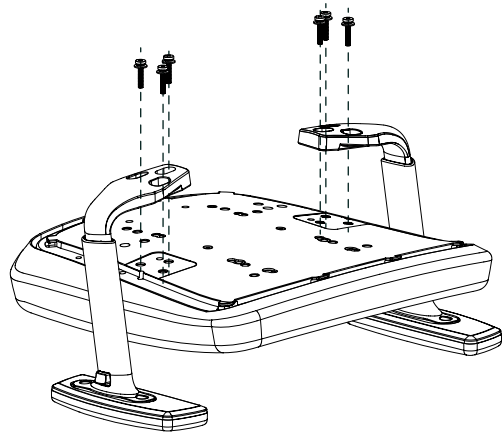


Step 3

Attach mechanism to seat shell using two M6X42 bolts and two M6X32 bolts with the mechanism bar to the front of the seat pan as indicated below. Tighten the bolts.

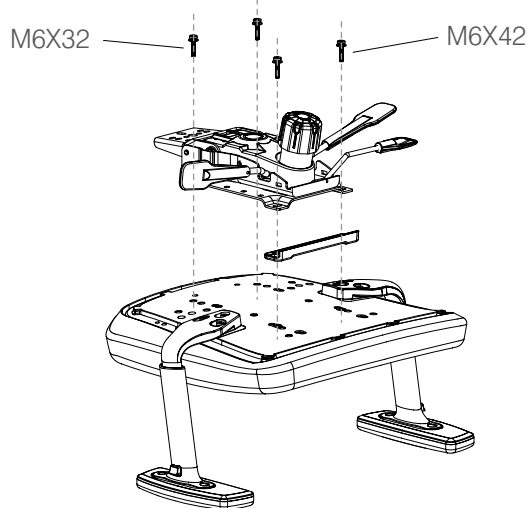

Step 4


Attach backrest to seat shell using three M8X35 bolts and tighten the bolts.

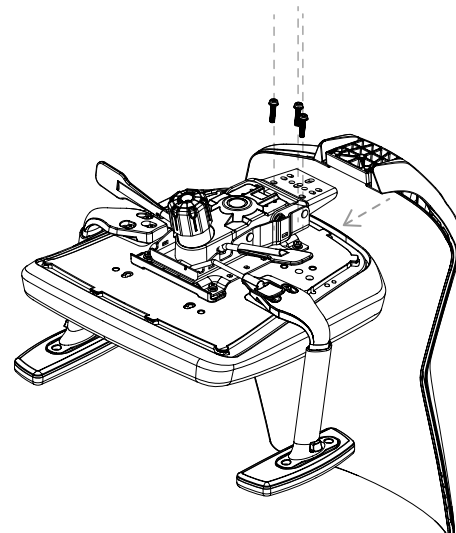

Installation


Step 5

Attach mechanism cover onto mechanism and make sure the four snaps indicated in red on mechanism cover fit into the four slots on mechanism.

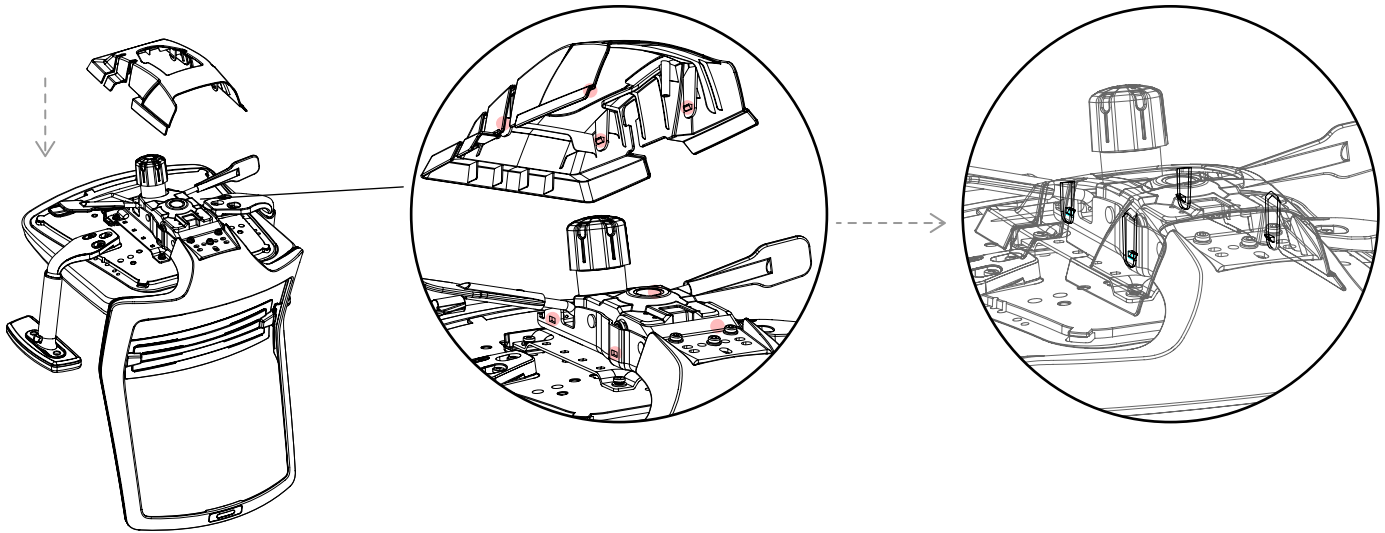


Step 6

Insert the castors onto leg base, then insert gas lifter onto top of leg base.

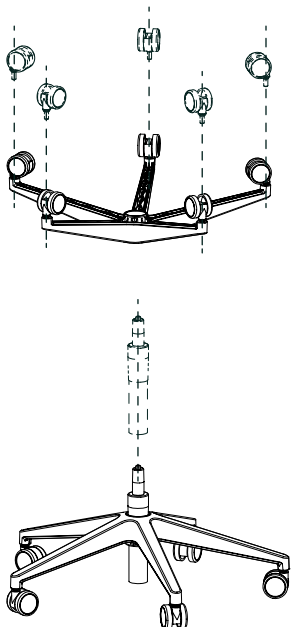


Step 7

Combine chair body with gas lifter via hole in mechanism.

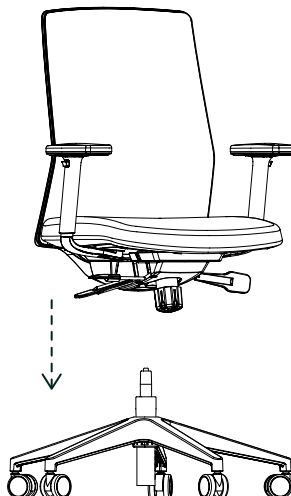

Step 8


Your Bodi chair is now ready to use.

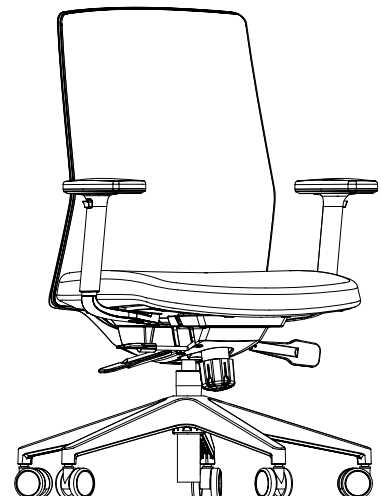

Changing Removable Seat Covers

Step 1

Pull the seat forward while pushing the lever under the seat.

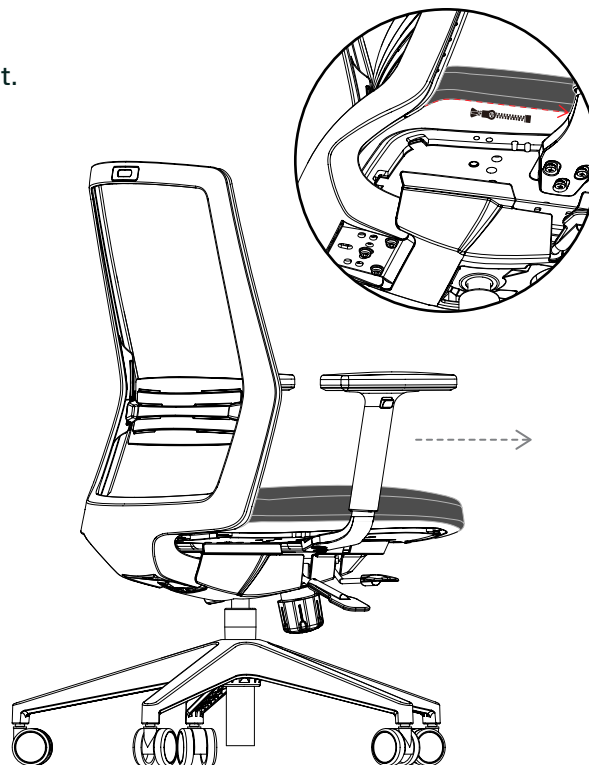

Step 2

Unzip the zipper on the back side and remove seat cover from the seat shell. Install new seat cover and zip to close.

