

Field Installation of End-of-Run (EOR) & Change-of-Height (COH) Clip on Tektis Panel Systems

1. Remove EOR, or COH trim off the kick panel.



2. Measure 7-1/4" from one end of the EOR trim, or measure approximately 3" from one end of COH trim and make a mark on the center rib of plastic carrier.

3. Take a metal clip, align center of clip with the mark you made in step 2 (2a). Push it on the center rib plastic carrier as shown (2b).

4. Follow step 2 and 3 on the other end of part and install clip on that end of part.

5. Install end-of-run trims with a rubber hammer at EOR clip locations to ensure engagement.

TIP: use wood blocks to avoid denting the end trims with the rubber hammer.

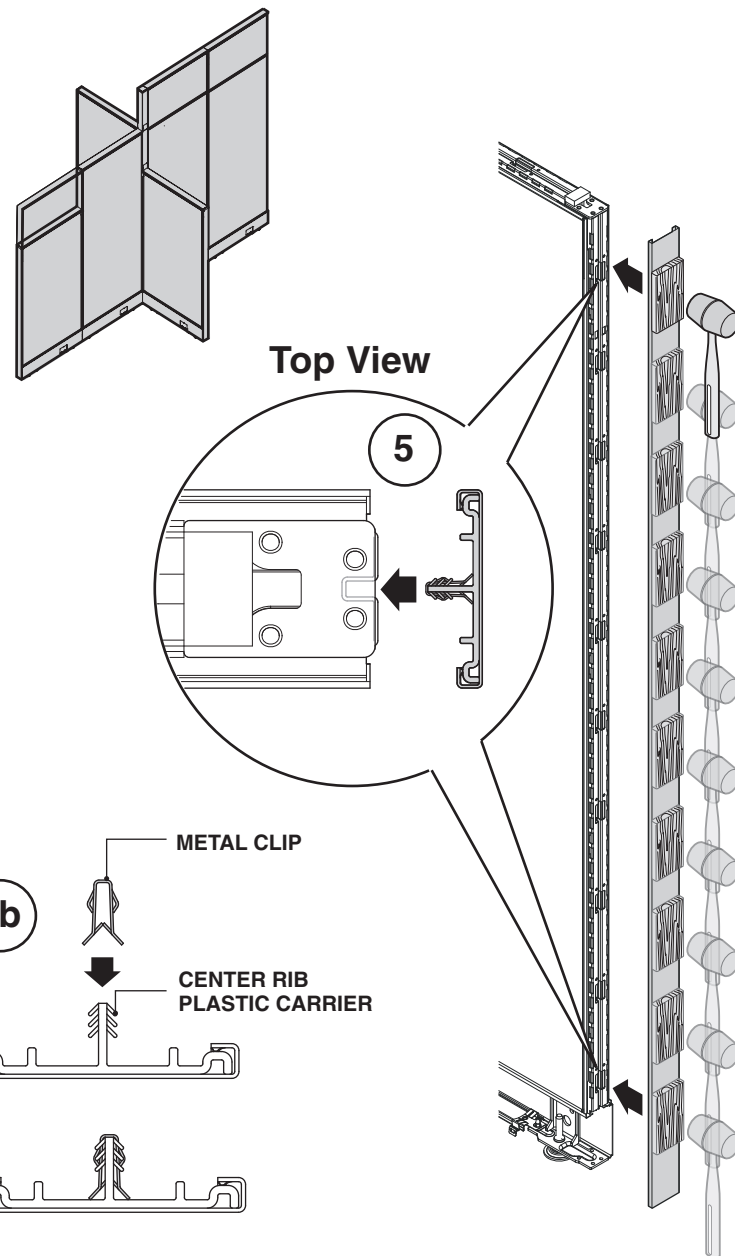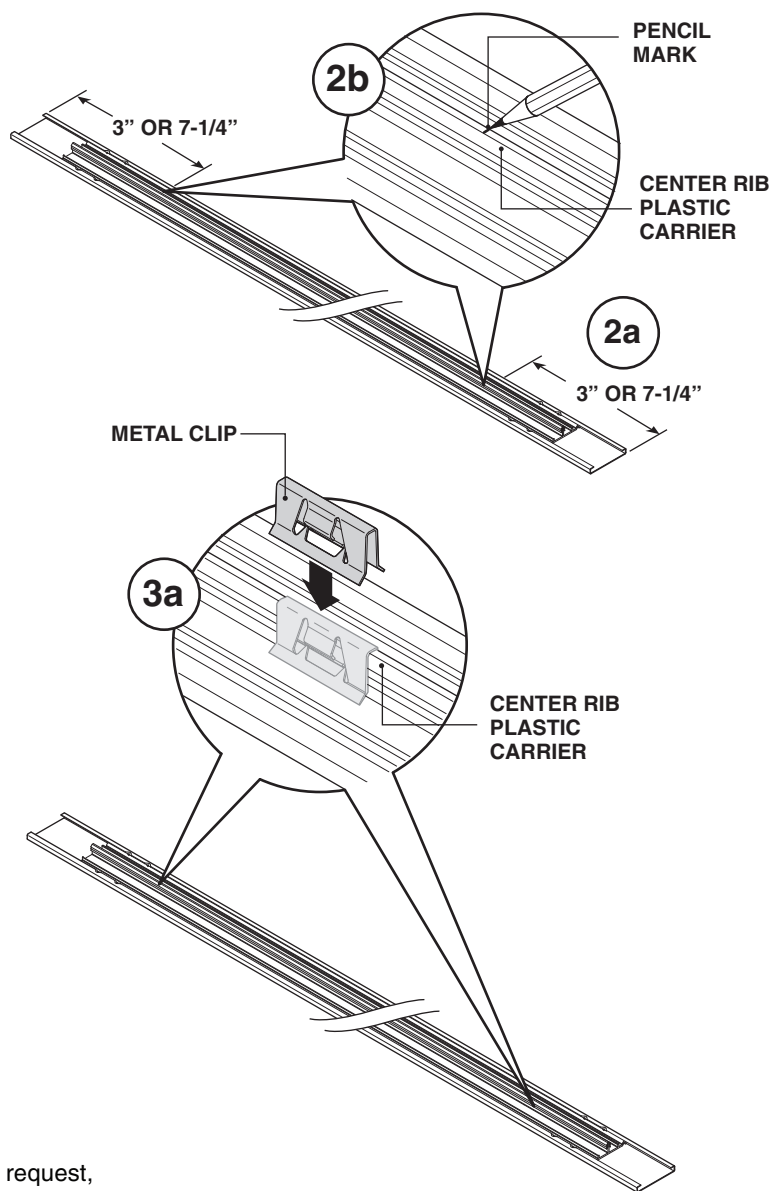

If you have a problem, question, or request, call your local dealer or AMQ Customer Care (877.801.0370) for immediate action by people who want to help you.