



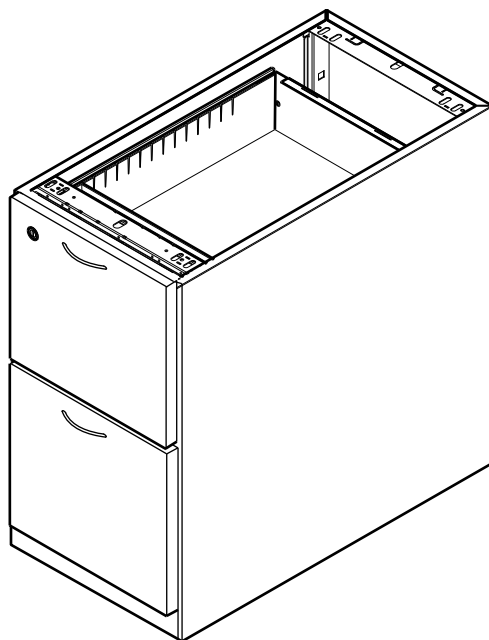


loaded

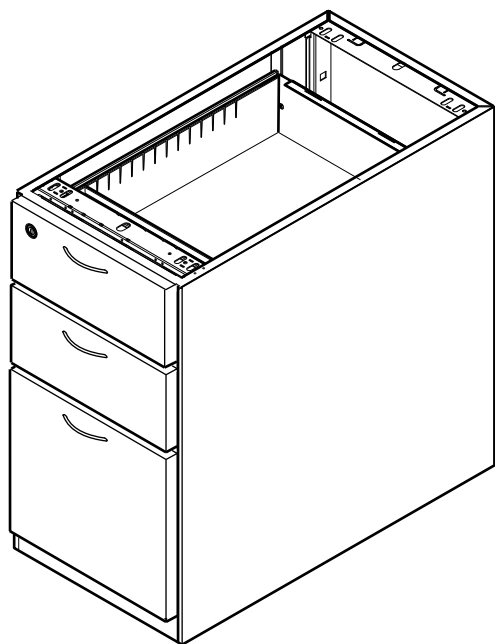

unloaded



If you have a problem, question, or request, call your local dealer or AMQ Customer Care (877.801.0370) for immediate action by people who want to help you.

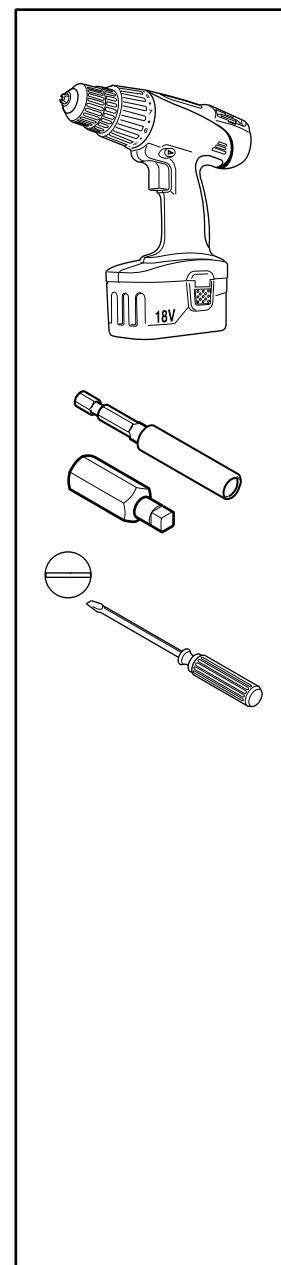




Drawer Removal

1. Pull drawer forward.
2. Push on tab on each side of the drawer rails.
3. Remove drawer completely.


4. Push drawer rails back into pedestal.

5. Remove remaining drawers.

TIP: Mark all drawers so they can be easily re-installed in their original positions.

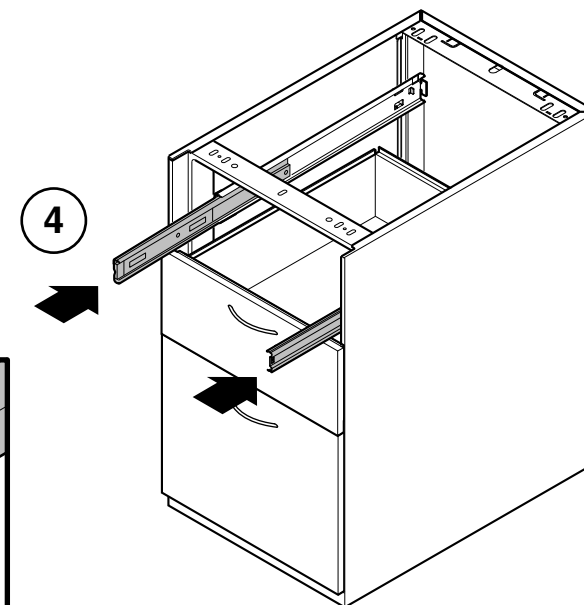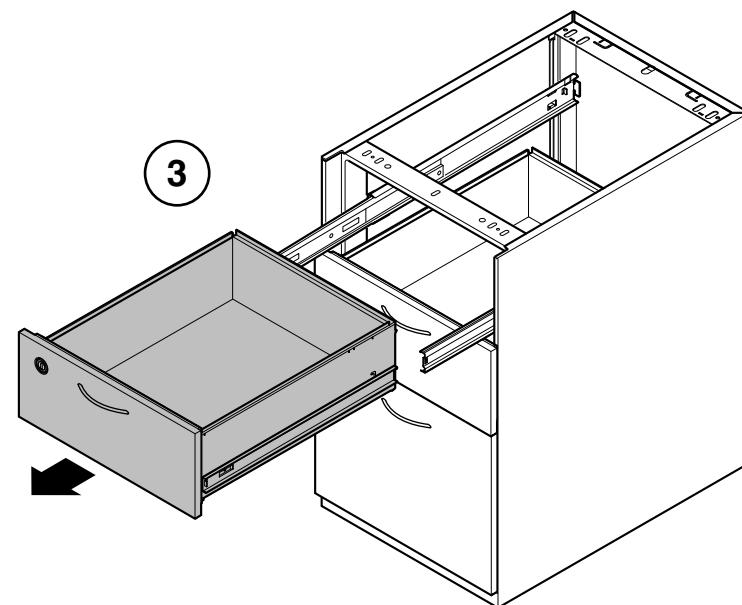
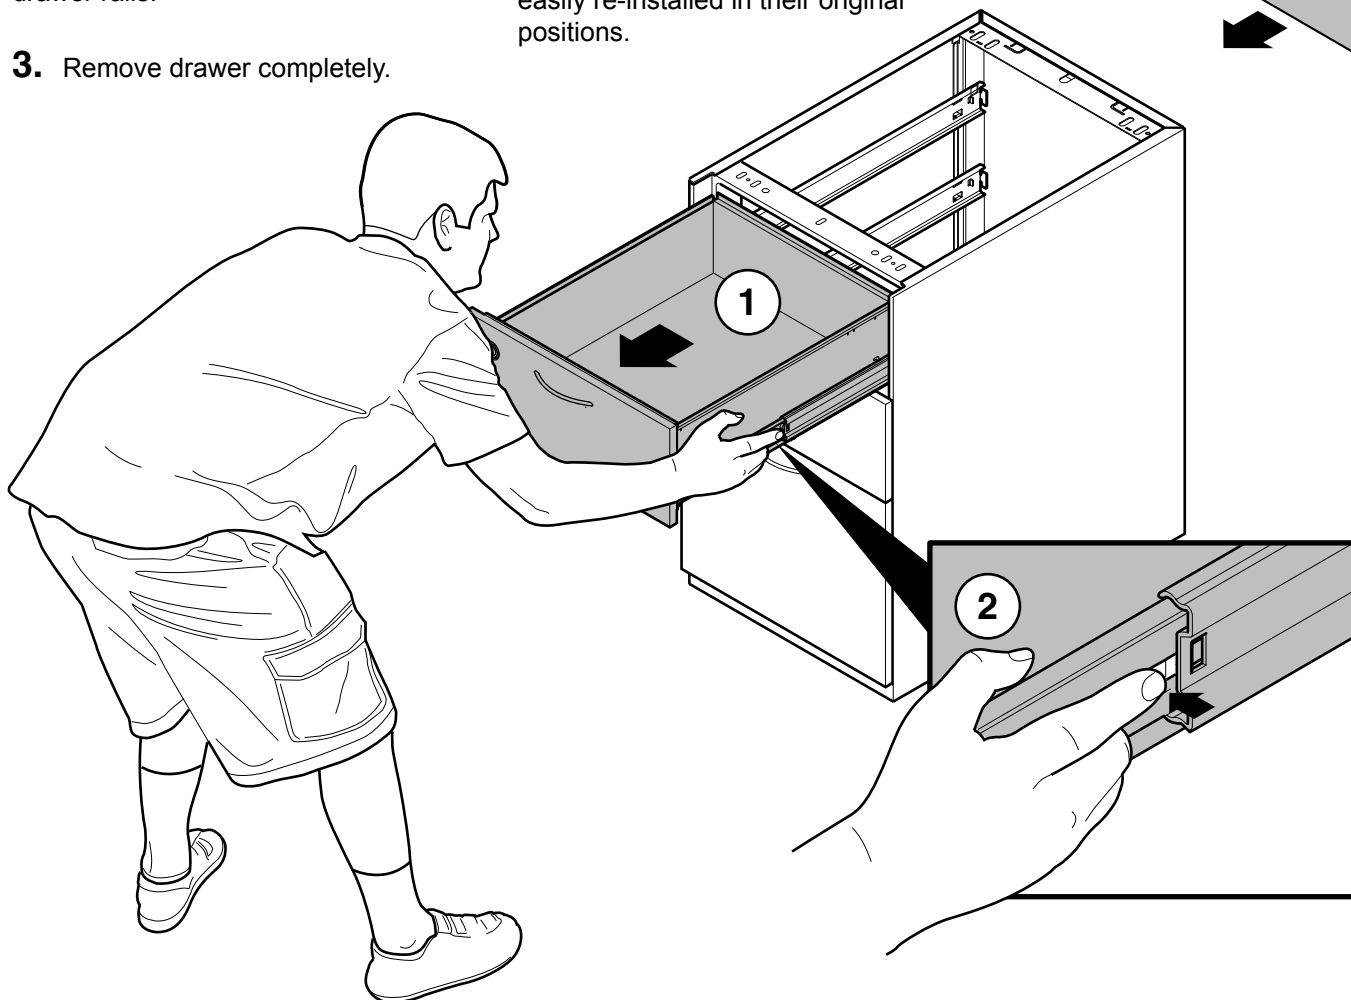


6. Place worksurface onto pedestal.

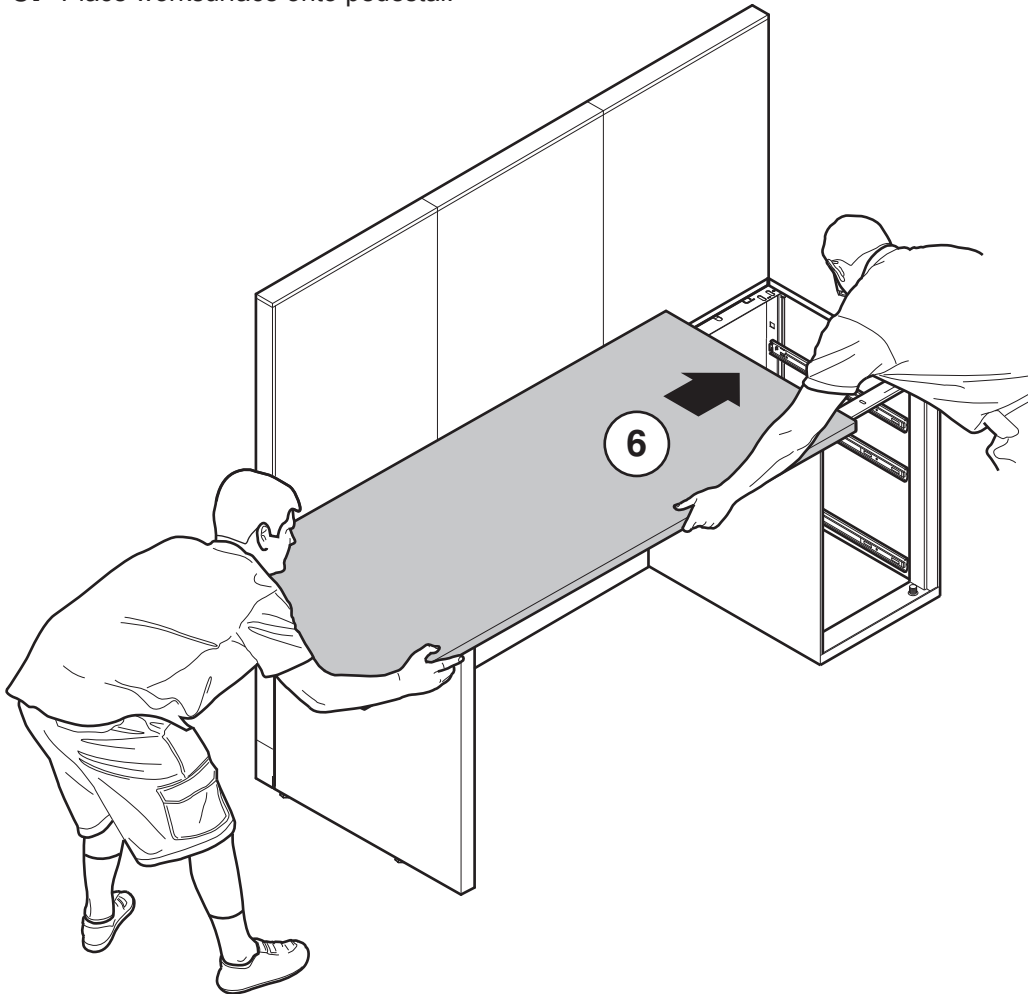

CONTEXT INSTALLATION NOTES:

- 1/8" thick spacers are provided to keep the pedestal level when mounted next to a Context end support.

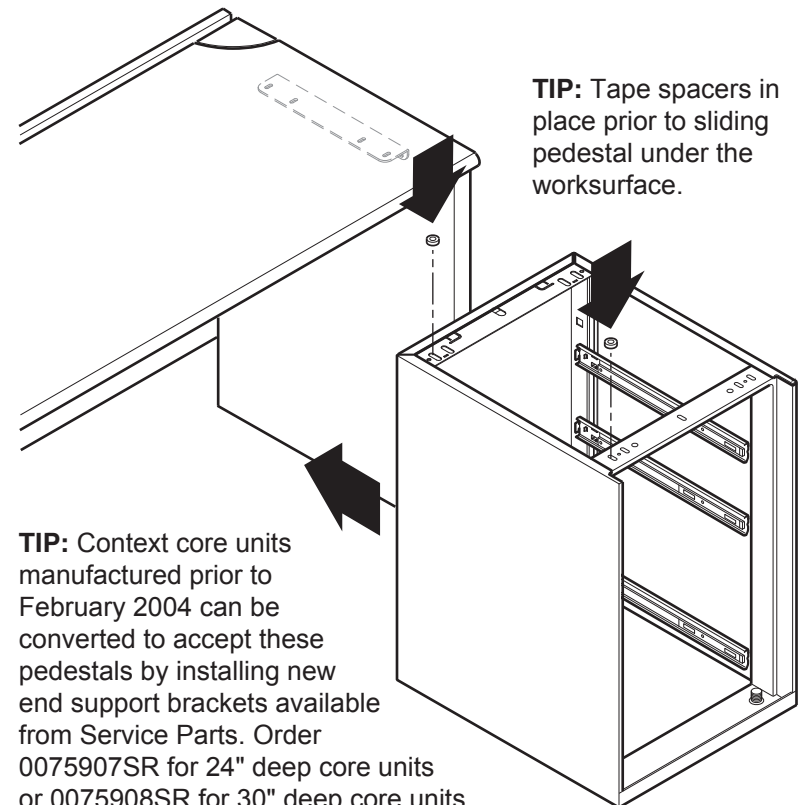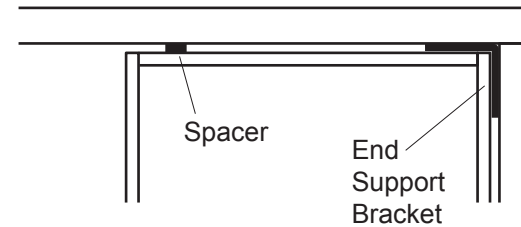


TIP: Tape spacers in place prior to sliding pedestal under the worksurface.

TIP: Context core units manufactured prior to February 2004 can be converted to accept these pedestals by installing new end support brackets available from Service Parts. Order 0075907SR for 24" deep core units or 0075908SR for 30" deep core units.

7. Attach worksurface to pedestal by fastening four (4) 1" pan head screws (855010168MP) through the pedestal body and mount to the bottom of the worksurface.



8. Adjust pedestal glides until they contact the floor and the worksurface is level.

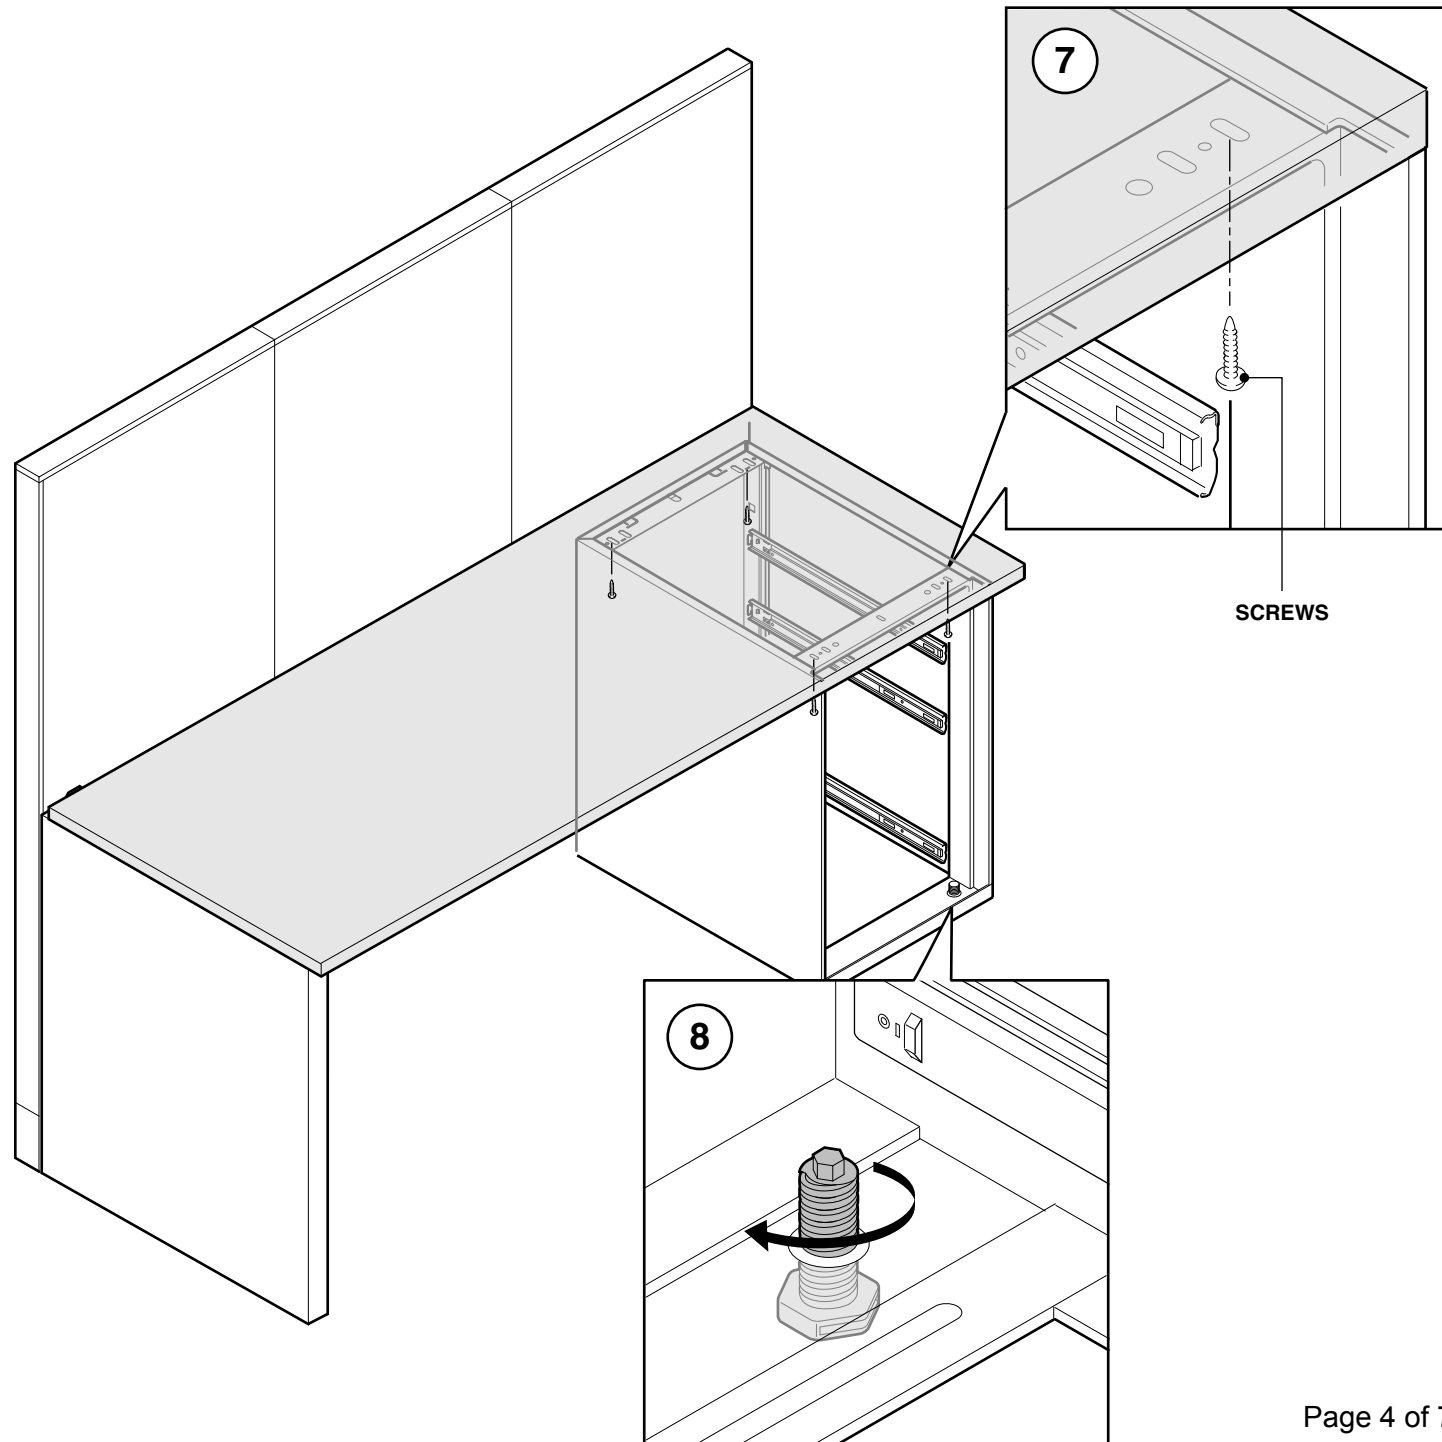

9. Tilt the counterweight plate approximately 45° to place it against the back panel of the pedestal. Repeat for other three (3) remaining plates.



NOTE: Universal pedestal counterweights are required in each 27"H pedestal in a freestanding desk, unless the desk is attached to another worksurface in an L-configuration.

10. Once all four (4) counterweights are in place, use a flat-bladed screwdriver to bend the tabs (10a) down to secure plates (10b) as shown. For kick freestanding, bend the tab at the back/bottom inside the pedestal (10c).

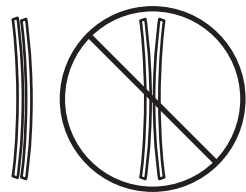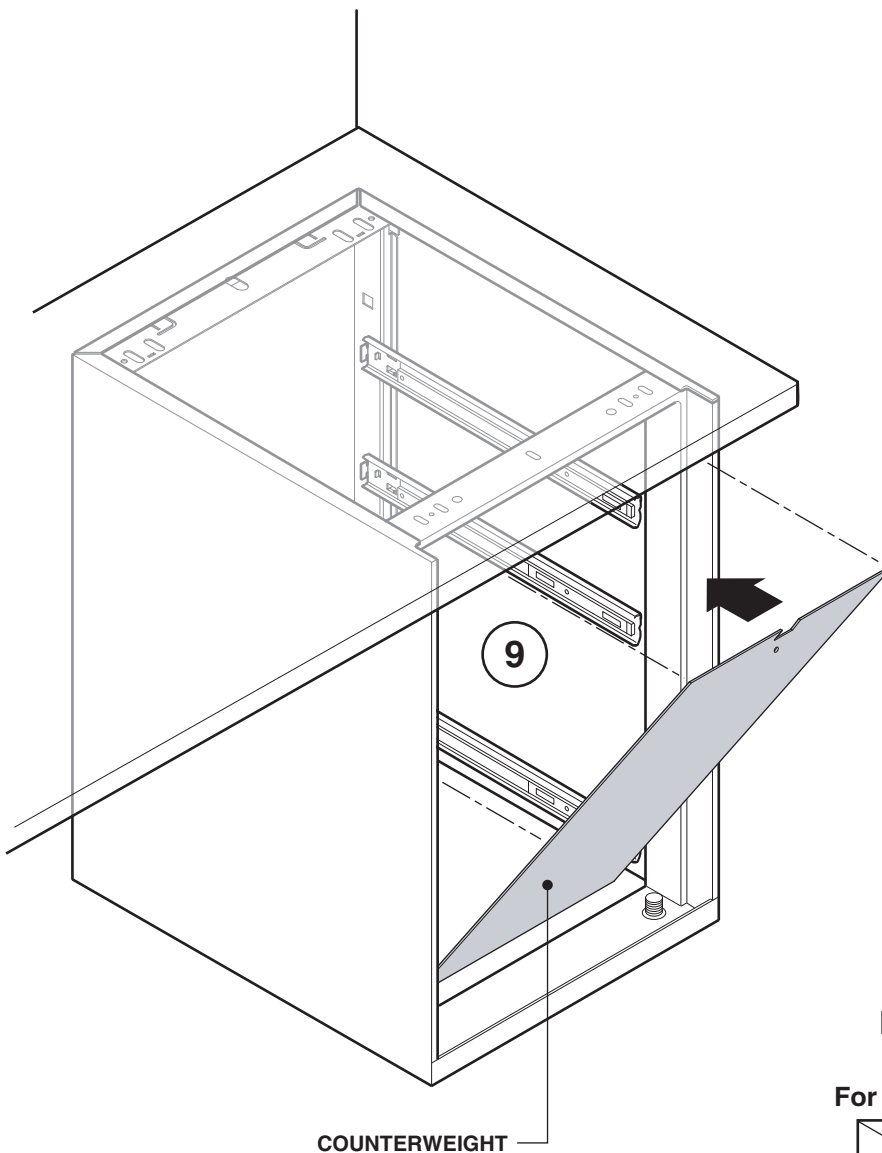


NOTE: If counterweights are warped, align counterweights so they curve in the same direction. Not in opposite directions.

**Inside Back of Pedestal
Looking Upward**

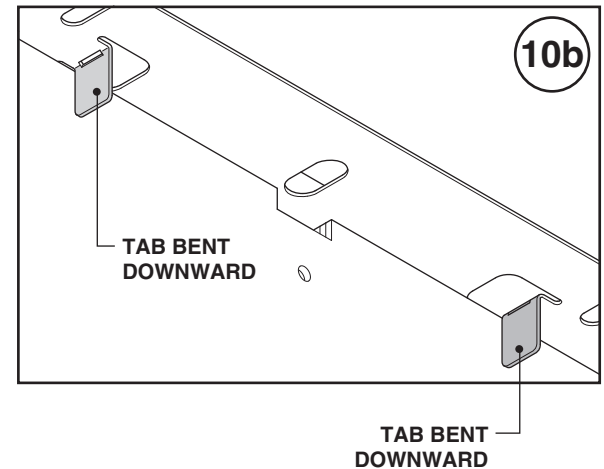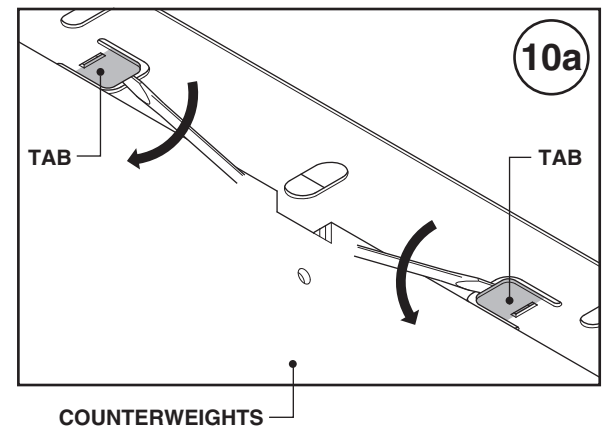

**Inside Back of Pedestal
Looking Downward
For Kick Freestanding only:**

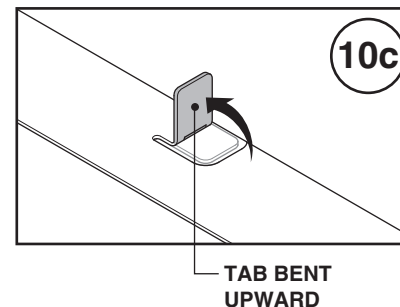

Installing Counterweights in a Freestanding Application


NOTE: Wrap tape around the tip of the flat bladed screwdriver before starting step 1.

1. Insert flat bladed screwdriver as shown and turn to pop out front of shelf side (1a). Pull out to remove (1b). Repeat for opposite side.

2. Remove two (2) screws and pull out security shelf.

3. Install counterweights as shown in steps 9 & 10 on page 5.

4. Reinstall shelf & sides.

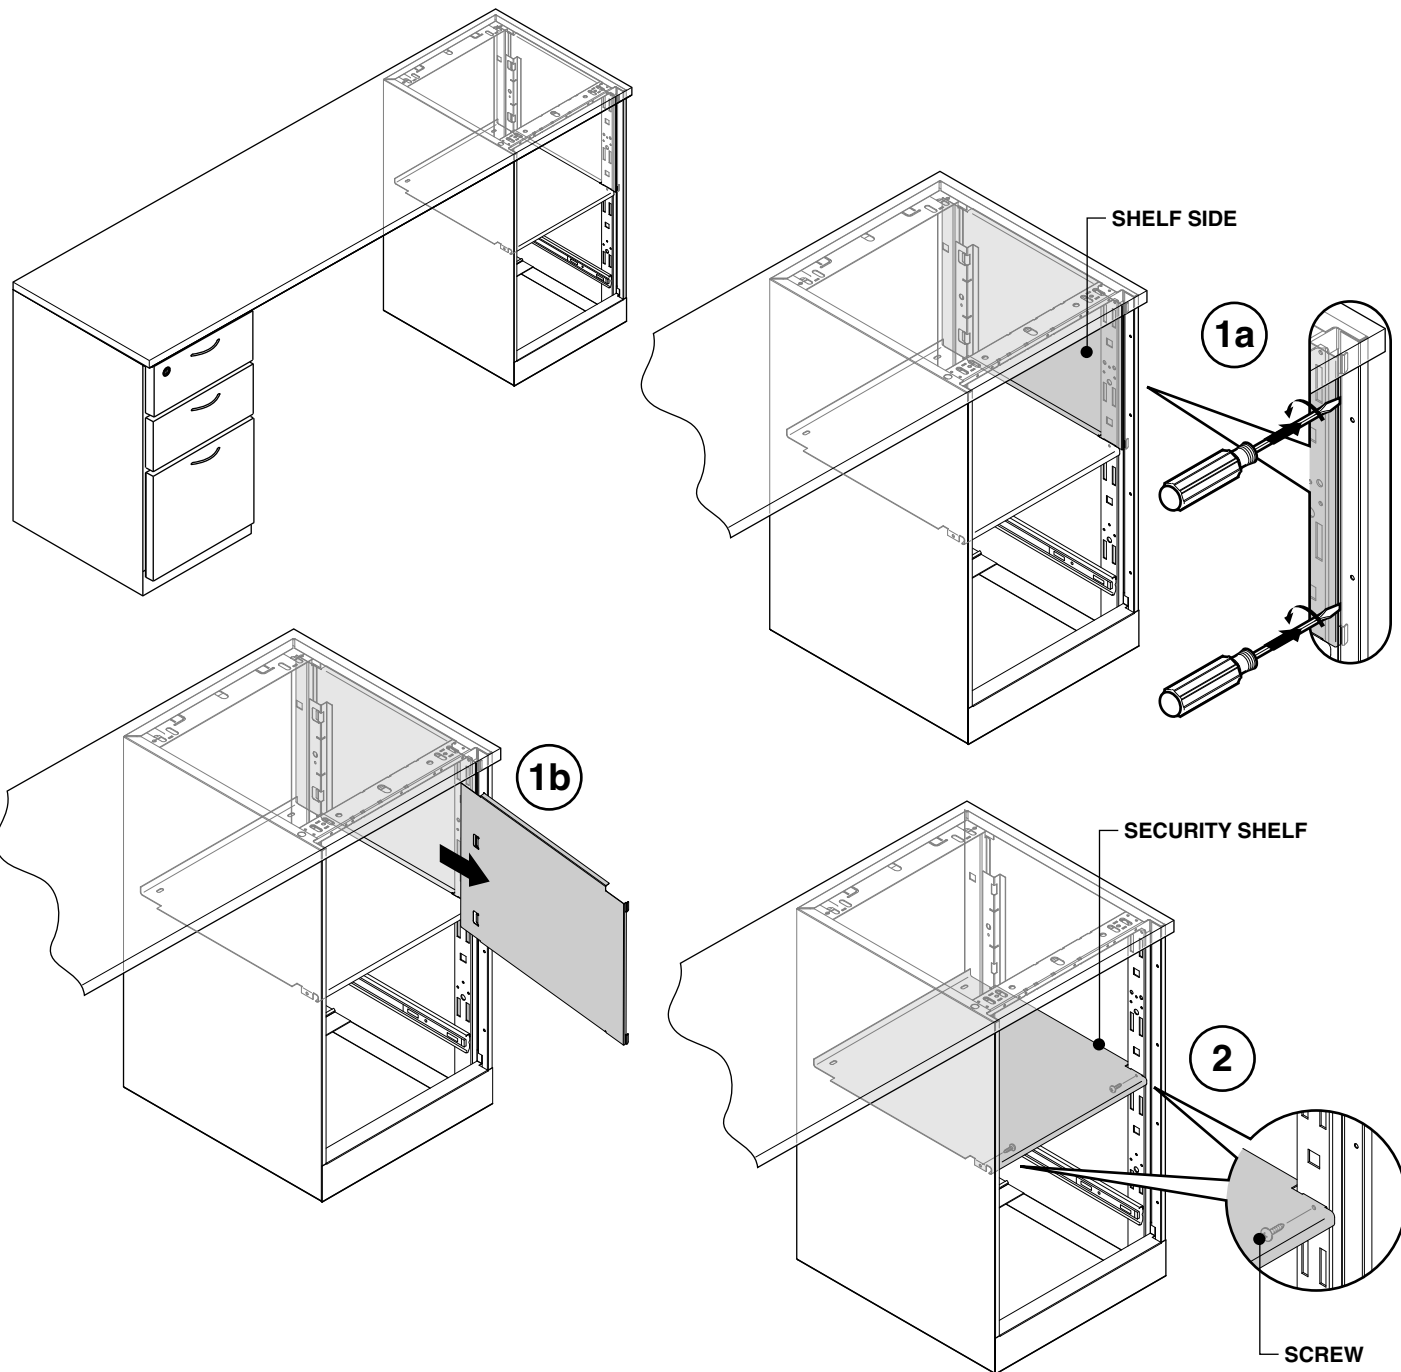

Drawer Re-Assembly

1. Verify that drawer rails are pushed back into pedestal.
2. Pull ball cages on drawer rails to front of drawer rails.
3. Carefully align drawer portion of rail with ball cage of pedestal portion of rail and gently push drawer back into pedestal.

TIP: Failure to re-assemble drawers correctly may damage rails, rendering them non-functional.

