

1. Determine placement of grommet. Check under worksurface for possible interference with bases or hardware.





2. Apply masking tape over area to avoid chipping of laminate.

3. Mark and drill a 1/8" dia. pilot hole through the worksurface. Bore hole with 3" (76.2 mm) dia. drill bit all the way through the worksurface.




4. Carefully remove tape.

5. Slide grommet into hole. (5a or 5b)

NOTE: Grommet can be glued into hole (if desired).

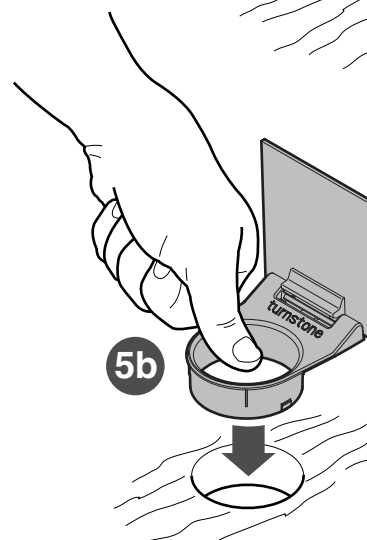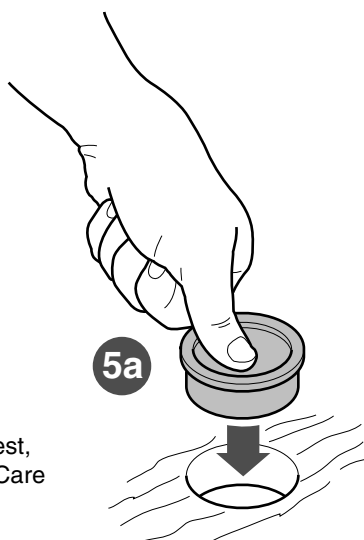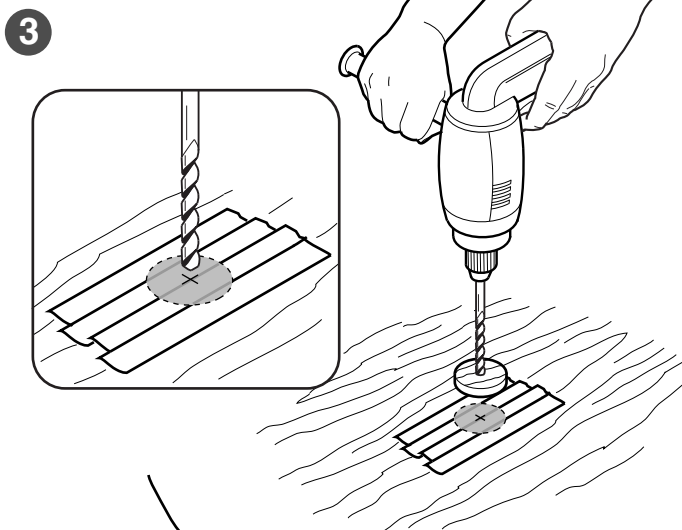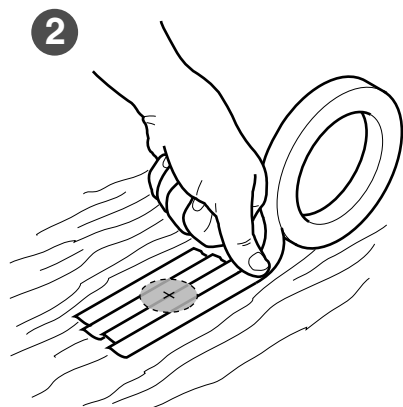

Tools (If hole needs to be cut in field)

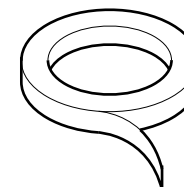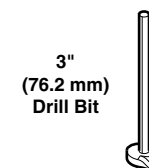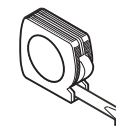

If you have a problem, question, or request, call your local dealer or AMQ Customer Care (877.801.0370) for immediate action by people who want to help you.