
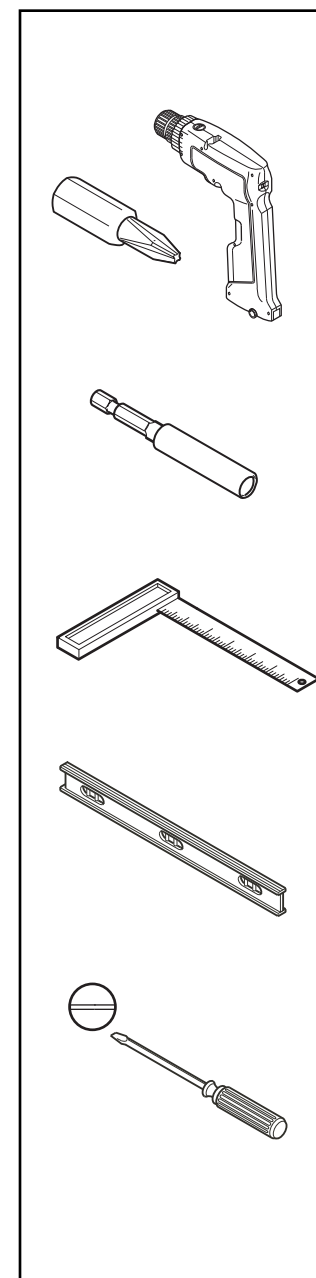
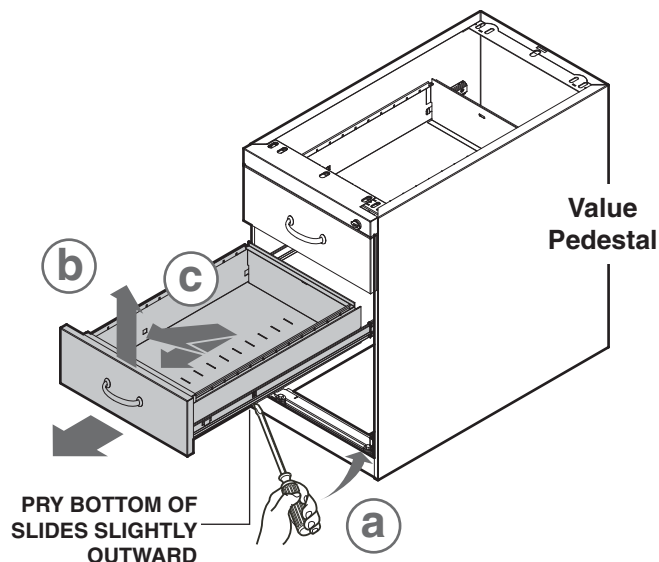
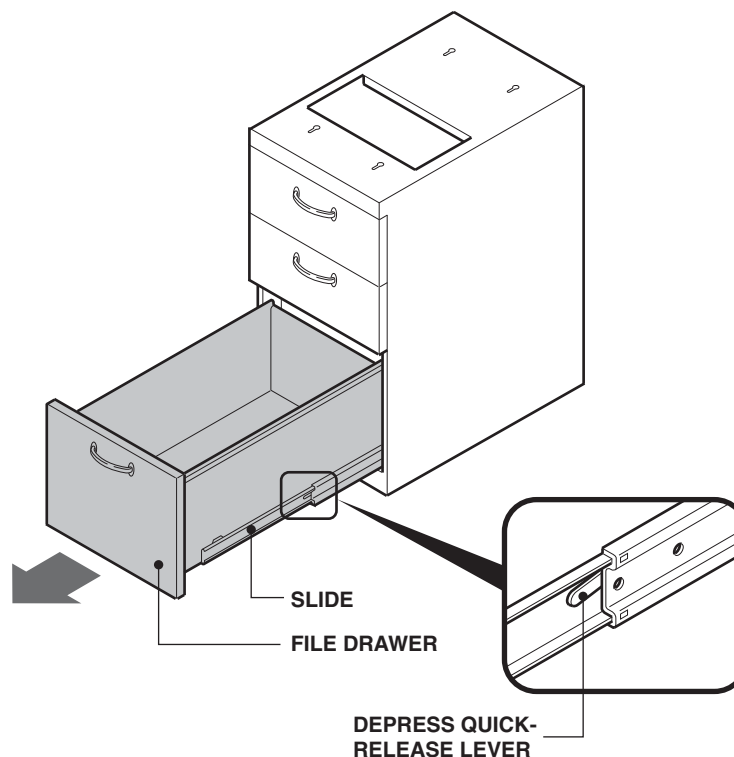


1. Remove drawers from the pedestal.

NOTE: Remove the file drawer first to allow clearance for box drawer removal.

TIP: Mark all drawers so they can be easily re-installed in their original positions.

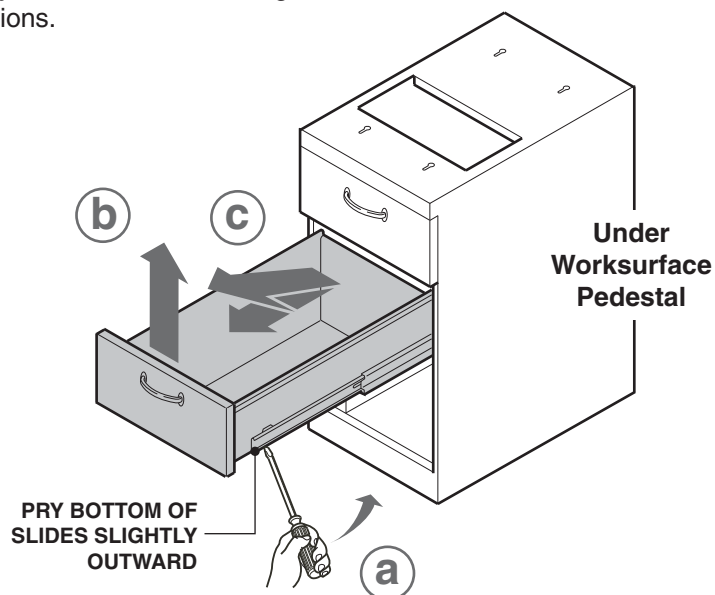

If you have a problem, question, or request, call your local dealer or AMQ Customer Care (877.801.0370) for immediate action by people who want to help you.




2. Make sure pedestal and pedestal filler are flush at the top and sides. Attach pedestal filler to pedestal by fastening screws through the holes at the top and bottom of the filler to the back of the pedestal.

3. Hook the newly joined pedestal and pedestal filler into the panel slots, making sure they are fully engaged. Top of pedestal and filler bracket should be approximately 27-1/2" from the floor.

NOTE: Filler bracket fits in the gap between panel base trims.

4. Attach the lock plate (at the top) into the panel slots, making sure the bottom hook is fully engaged. (4a & 4b). Rotate the lock plate onto the pedestal filler stud. (4c) Place the washer and nut over the stud and tighten. (4d)

TOP VIEW OF LOCK PLATE

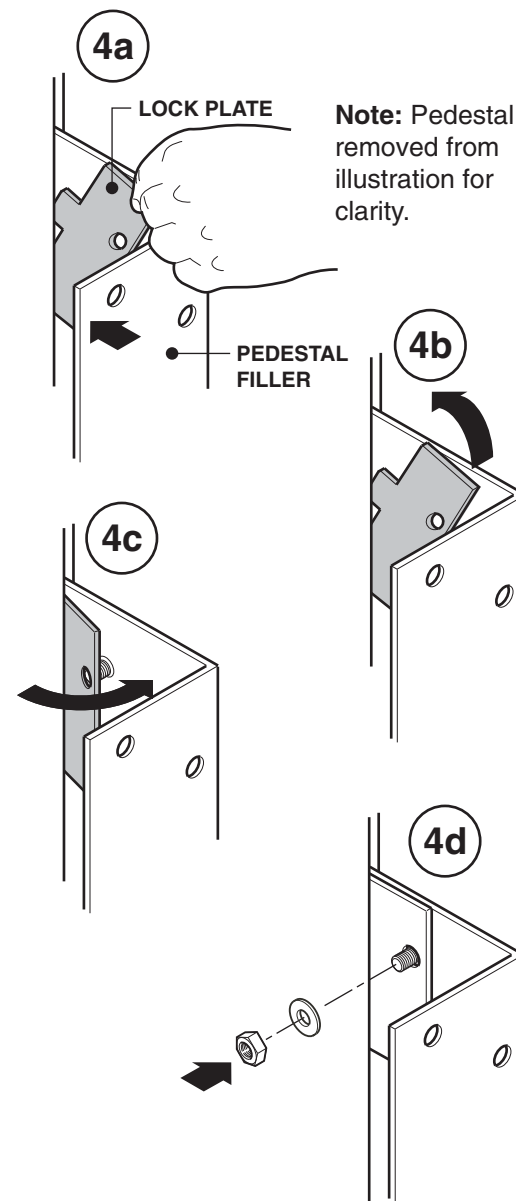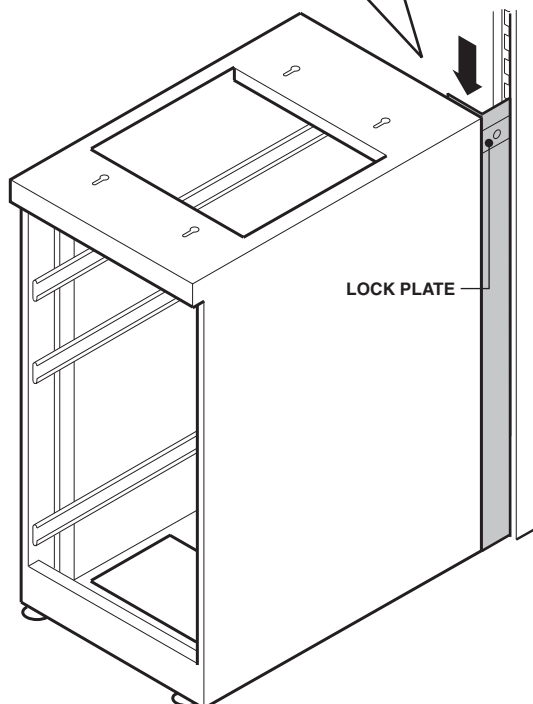
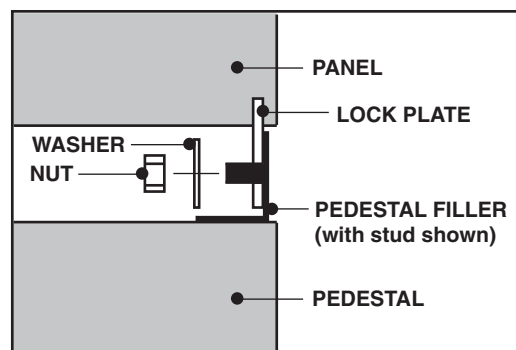


- 5.** Place worksurface over the pedestal. Secure worksurface to pedestal with four (4) screws supplied.

NOTE: Front edge of the worksurface overhangs the front of the pedestal approximately 1/8". When worksurface is correctly positioned over the pedestal.

- 6.** Level the pedestal by adjusting the glides to make contact with the floor.

- 7.** Re-install drawers in their original positions.

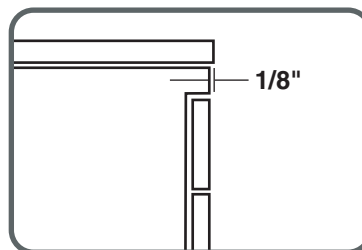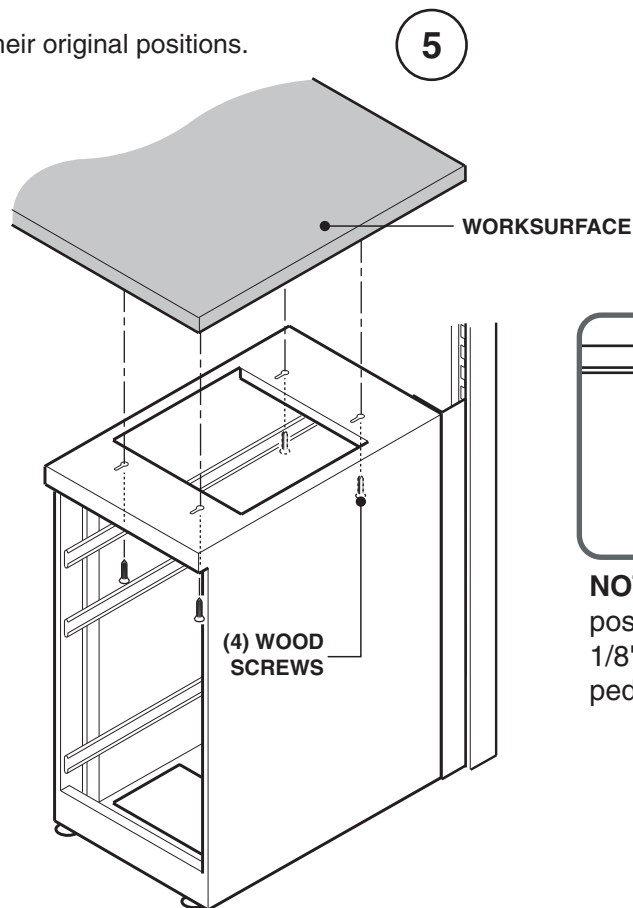

NOTE: Worksurface to be positioned approximately 1/8" from the front of the pedestal.

