




page 4

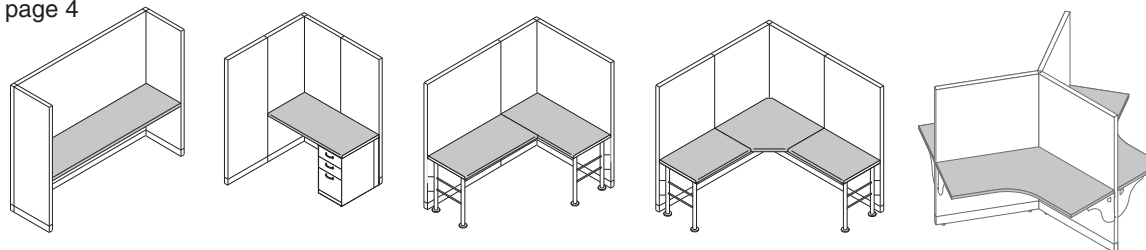





page 4

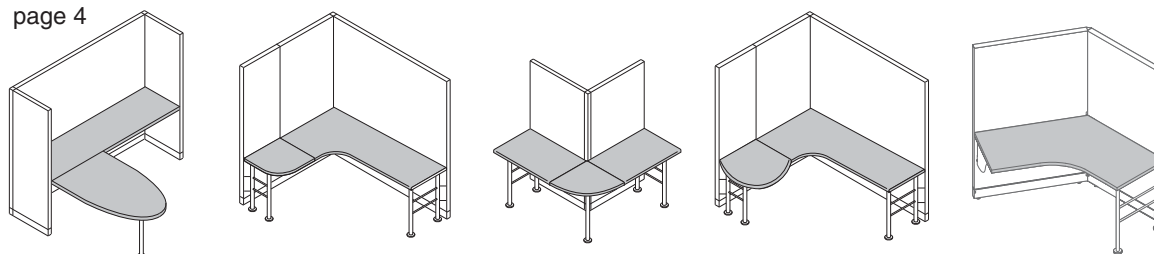

page 5

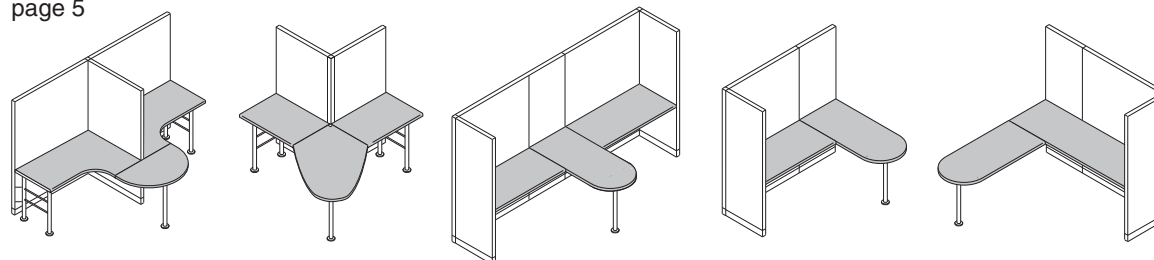


page 6

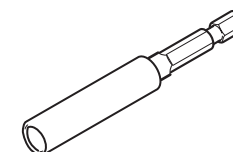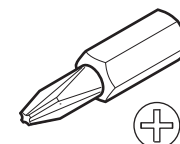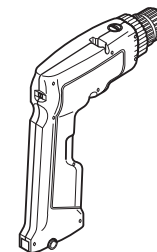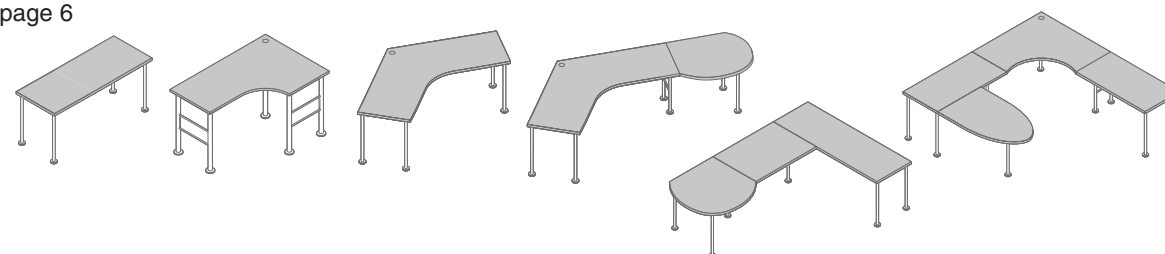

If you have a problem, question, or request,
call your local dealer or AMQ Customer Care
(877.801.0370) for immediate action by
people who want to help you.


Cantilever and Tie Strap

See Cantilever
Assembly Instruction 939504645

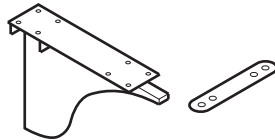


11" Center H-Leg (standard)

See H-leg
Assembly Instruction 939504843

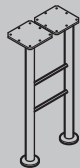


20" H-Leg (standard)

See H-leg
Assembly Instruction 939504843

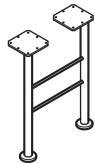


Pedestal Filler


See pedestal filler
assembly instruction 939504842

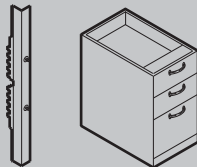


Attaching Brackets (page 3)

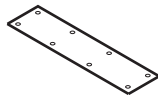

Mounting Brackets (page 3)

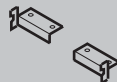


Leg page 5




Mounting Worksurfaces

1. Mark height of worksurfaces to 27 1/2". Attach the support brackets to the vertical junctions. A minimum of 1 pilot hole per corner and side support bracket is provided. All other supports contain a minimum of 2 pilot holes.

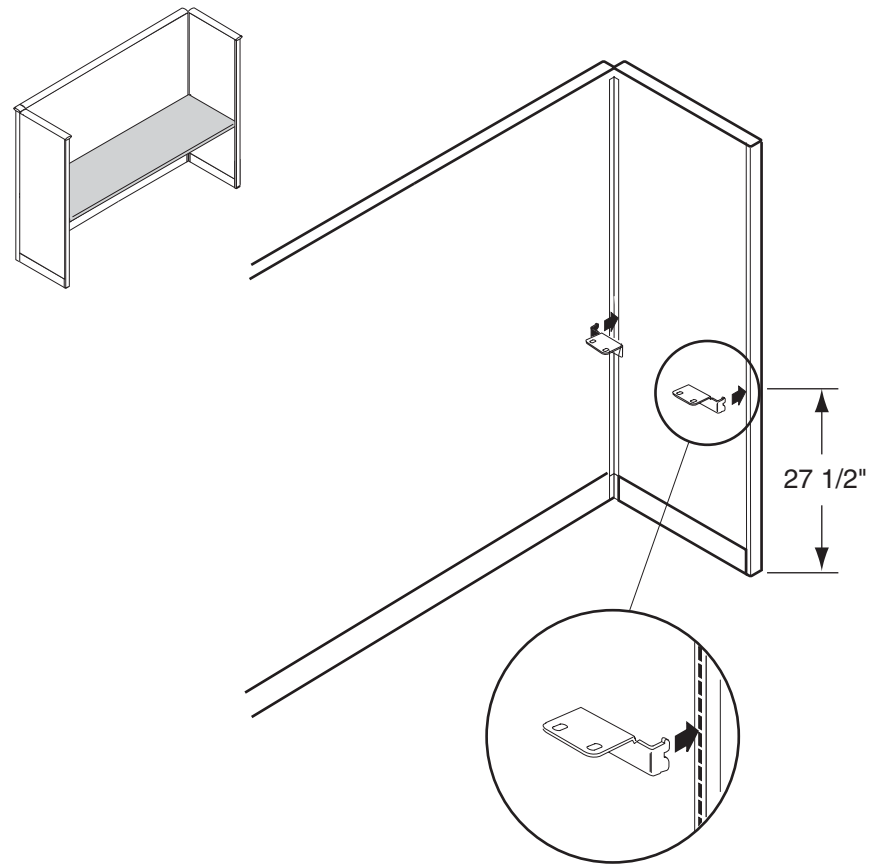


2. Lay worksurfaces on supports for the entire workstation cluster loosely securing each surface to supports and adjust worksurfaces for optimal appearance. Secure screws starting with corner workstation.

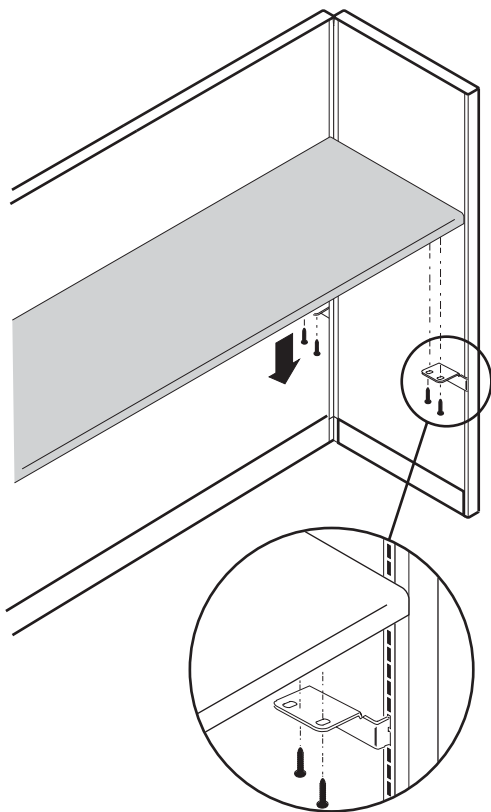


Attaching Adjoining Worksurfaces

all available holes.


Place support plates as shown. Secure a screw in

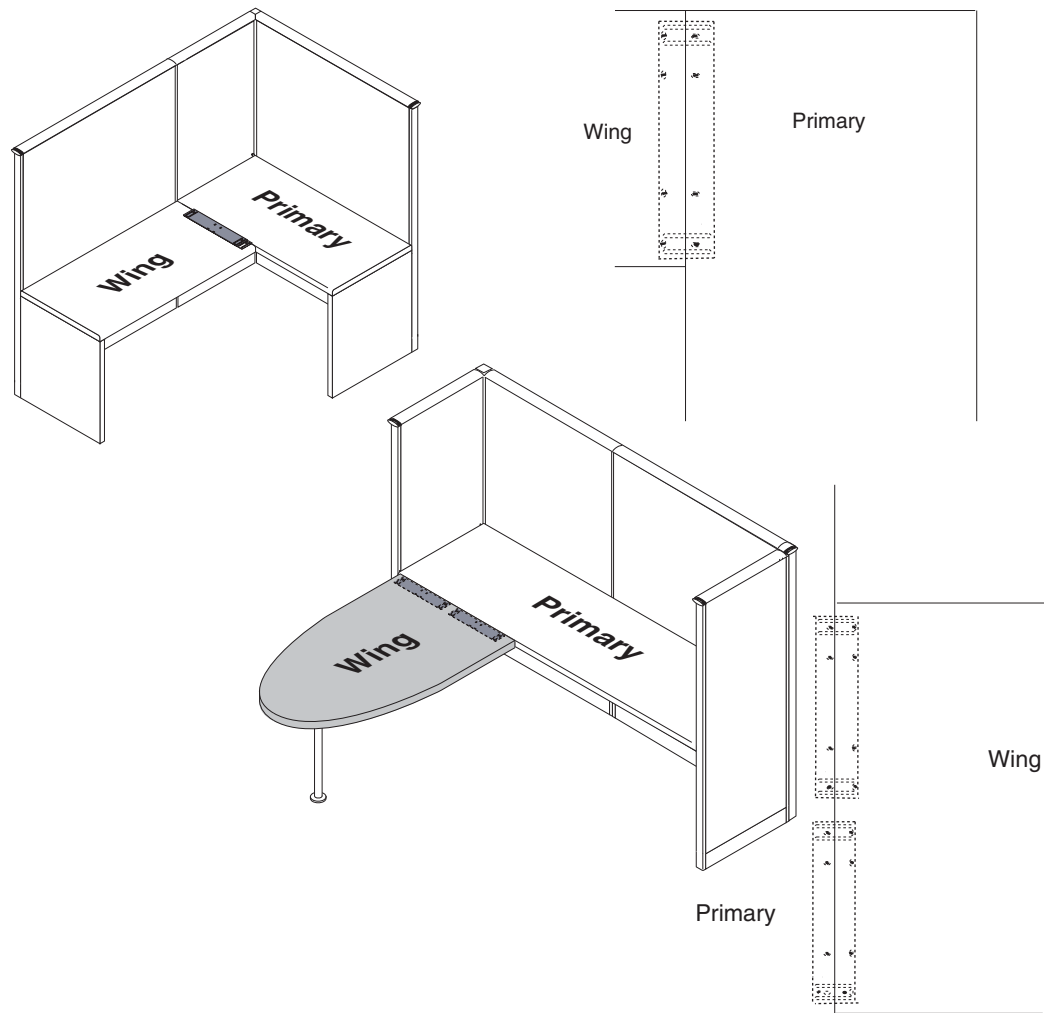


See page 2 for support information

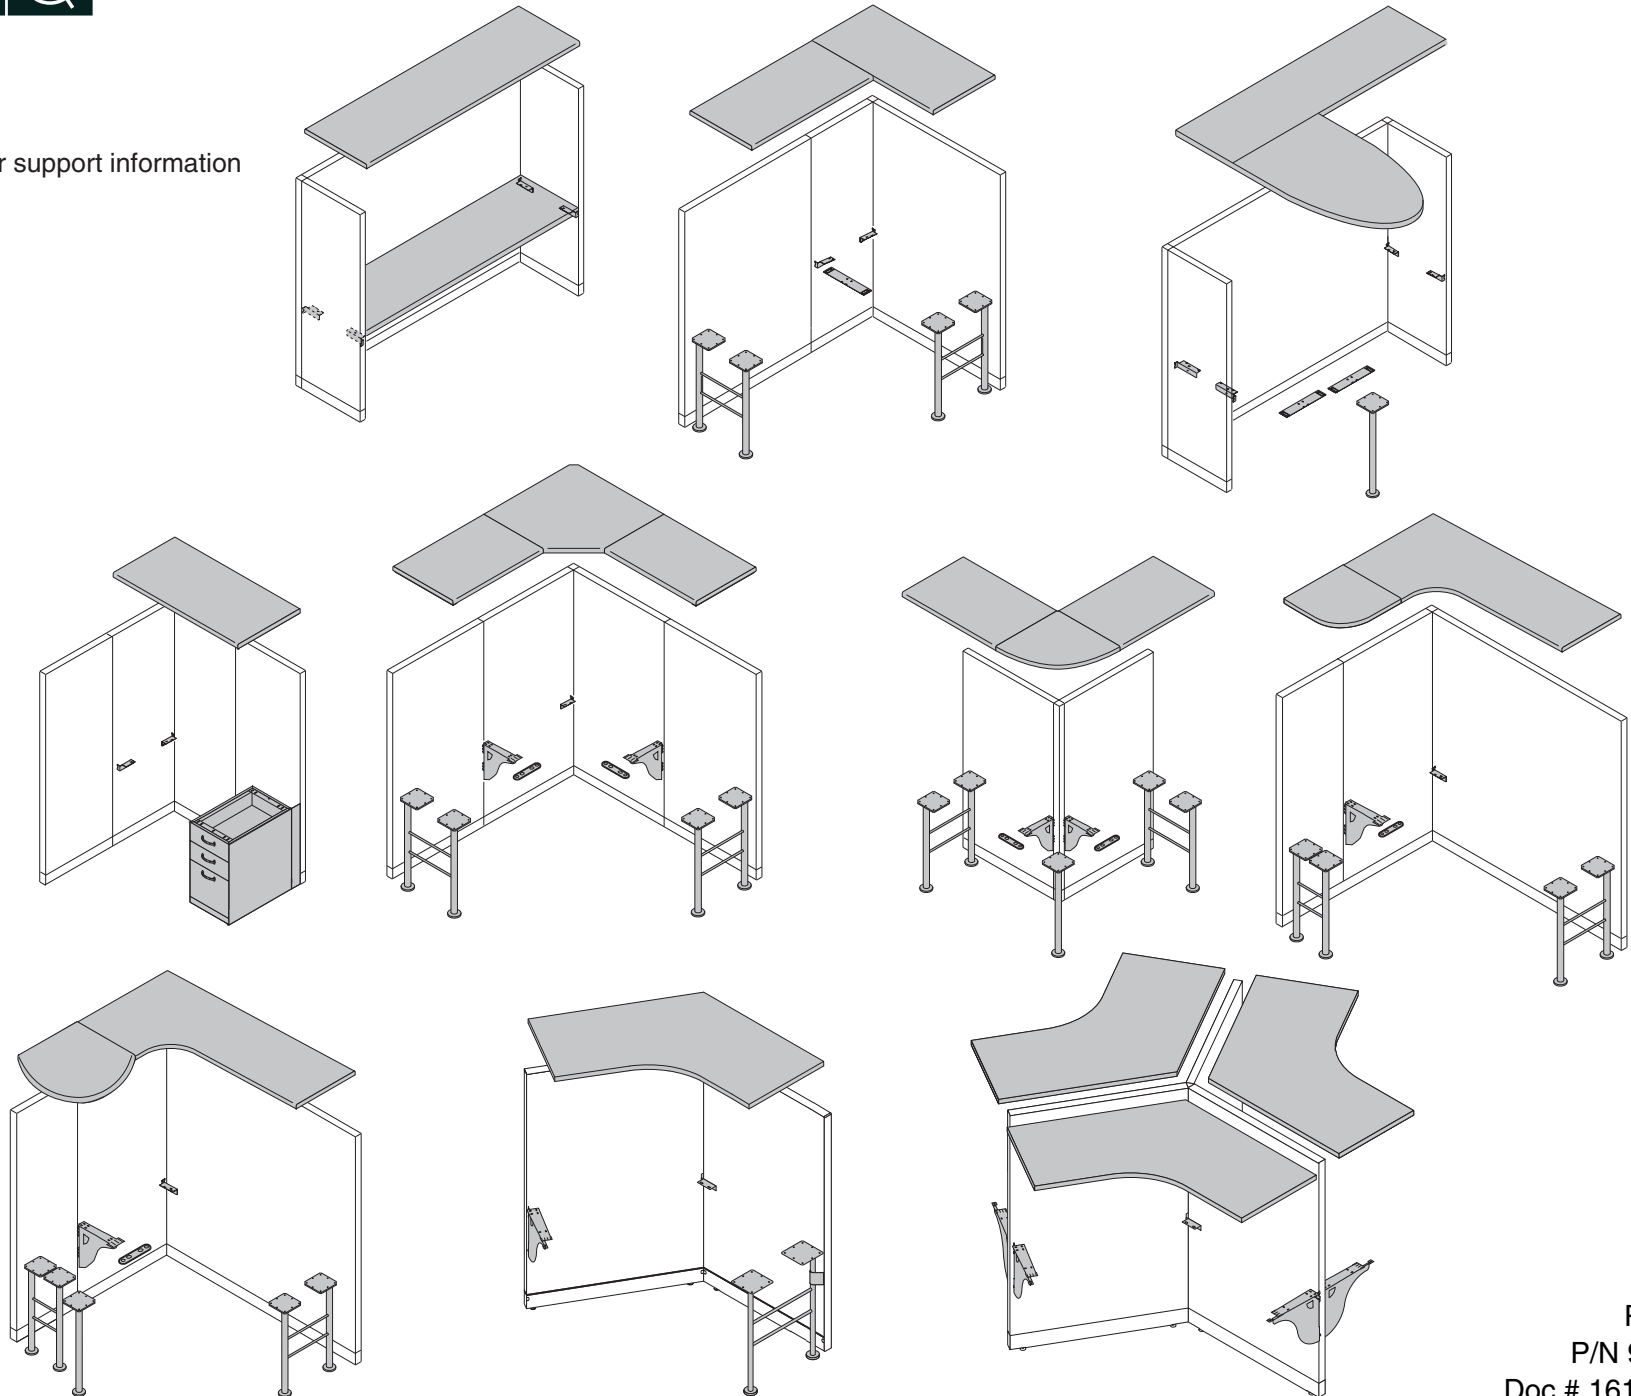

See page 2 for support information

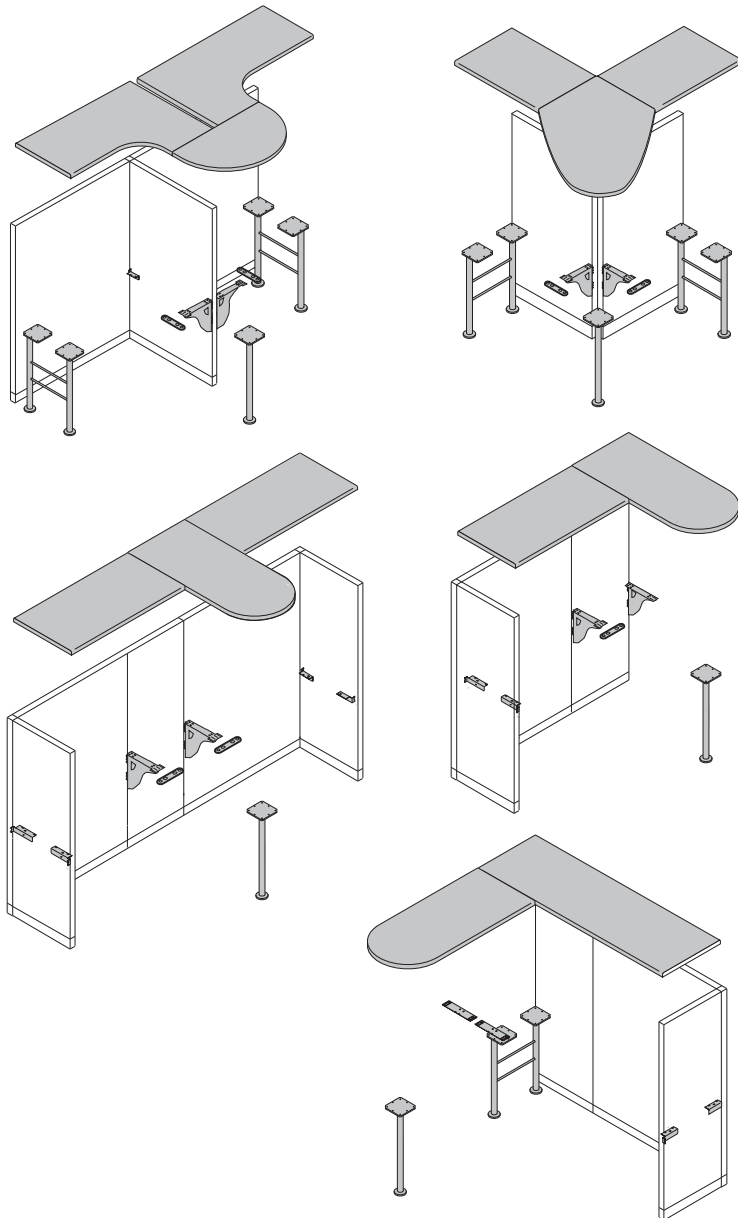

Post Leg Orientation

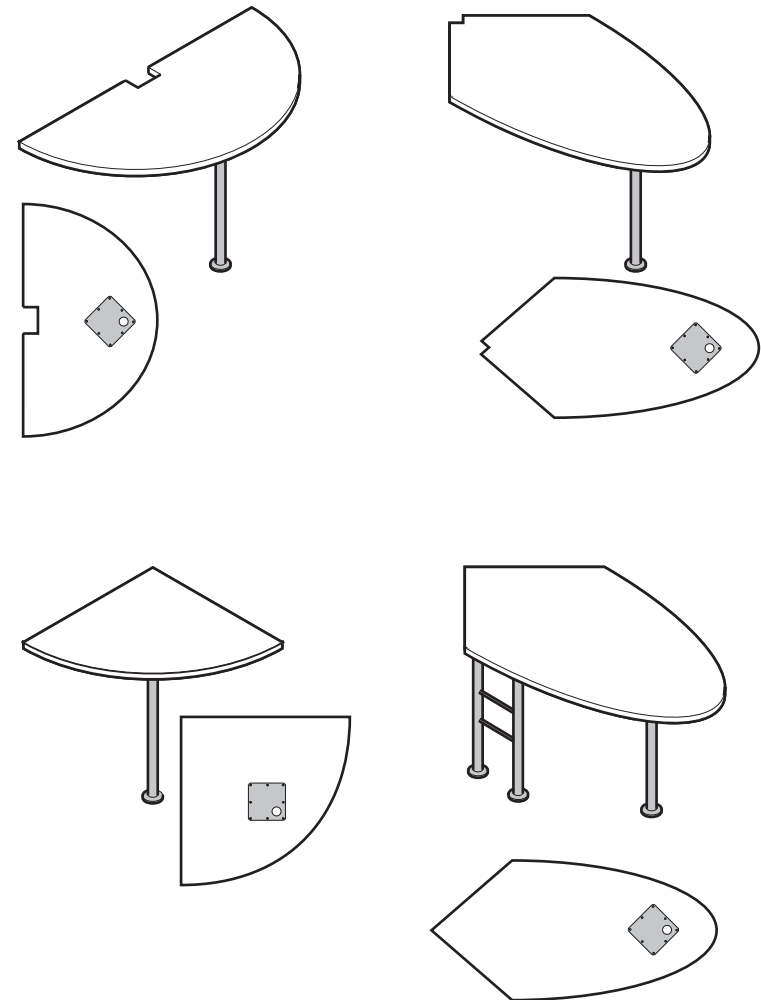

See page 2 for support information

